



#### **Correct Disposal of This Product** (Waste Electrical & Electronic Equipment)

(Applicable in the European Union and other European countries with separate collection systems)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

AB82-01484A Rev-02

Real Time DVR user manual

SAMSUNG

SHR-5040  
SHR-5042  
English

# Real Time DVR user manual

imagine the possibilities

Thank you for purchasing this Samsung product.  
To receive more complete service, please  
register your product at

[www.samsung.com/global/register](http://www.samsung.com/global/register)







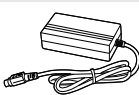


# key features of your DVR

Your purchased digital video recorder (DVR) compresses a 4-channel camera input into an MPEG4 video; also, it provides the functions that record to the HDD in real-time and play the content by compressing the 4-channel audio input with ADPCM. Also through the network, it transmits video and audio to an external device in real-time and allows monitoring the video and audio through a PC from a remote location.

- 4-Channel Composite Input Connectors
- NTSC/PAL Video Source Compatible
- The CIF size (NTSC : 352X240 / PAL : 352X288) of video can be saved at a speed of 120ips(NTSC)/100ips(PAL) (Image Per Second).
- 4-Channel Loop Through Video Connectors
- Supports the overwrite mode of HDD.
- Large capacity HDD backup by using the USB 2.0 interface
- Backup by using the USB 2.0 memory and CD-RW
- Record, play, and simultaneous video and audio transmissions to the Windows Network Viewer (Net I).
- Possible to record and play the 4-channel audio
- Various saving modes (Continuous, Motion, Alarm In and Schedule)
- Alarm interface (input: 4, output: 2)
- Remote monitoring function by using the Windows Network Viewer (Net I)

## WHAT'S INCLUDED WITH YOUR DVR

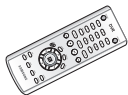When you have purchased this product, please take off the packing and place this device on a flat floor or put it down on the place desired for use. And then, check whether all the following components are included in the box. If a component is found to be missing, please contact the place that you have purchased this product.

			
Remote control unit (RCU)	1 power cable	Software CD (including the PDF manual)	Special 4 screws
			
Adaptor	2 EA of AAA batteries	User's Manual	

# safety regulations

Please be sure to keep the following in mind for the right use of the product to prevent proprietary risk or damage.

- **Do not use multiple plugs at once.**  
This may cause abnormal heat generation or fire.
- **Do not put a vase, flowerpot, cup, cosmetics, medicine, or vessel with water around you.**  
This may cause fire.
- **Do not bend the power cord forcibly nor put a heavy material on it.**  
This may cause fire.
- **Do not touch the power plug with wet hands.**  
This may cause electric shock.
- **Insert the power plug firmly enough not to shake.**  
This imperfect connection may cause fire.
- **Keep the product off humidity, dust, or soot.**  
This may cause fire or electric shock.
- **Do not put metals (coin, hair pin, metal piece, etc.) or inflammable materials (match, paper, etc.) in the ventilation hole.**  
This may cause fire.
- **Keep the surrounding temperature between 0°C to 40°C and keep the product off humidity.**  
This may cause breakdown.
- **Secure sufficient ventilation.**  
This may cause abnormal operation due to high temperature.
- **Keep the product off direct ray of light or heat from the heating device.**  
This may cause fire.
- **Do not disassemble, repair, or remodel the product.**  
This may cause fire, electric shock, or injury due to abnormal operation.
- **Do not pull out the power cord.**  
This may destroy the power cord, eventually, cause fire or electric shock.
- **Plug out in the event of thunder or lightning.**  
This may cause fire.
- **Keep your children off the battery after you take it out of the product. They tend to swallow it unconsciously.**  
If your children swallow it, please see the doctor immediately.
- **Install the product at a safe place or attach the product to the wall or ceiling with a stand firmly enough not to fall to the ground.**  
This may injure people.



# before start

This user's manual provides Information for using DVR such as brief introduction, part names, functions, connection to other equipment, menu setup, and the like.

You have to keep in mind the following notices:

- SEC retains the copyright on this manual.
- This manual cannot be copied without SEC's prior written approval.
- We are not liable for any or all losses to the product incurred by your use of non-standard product or violation of instructions mentioned in this manual.
- If you want to open the case of your system for checking problems, please consult the expert from the shop where you bought the product.
- You may download open source codes from the following website: <http://www.samsung.com>.
- Before installing any external device such as external memory or HDD, please check the compatibility of the device with Samsung DVR. The list of the compatible devices with Samsung DVR can be obtained from your vendor.

## WARNING

### Battery

Exchanging a wrong battery in your product may cause an explosion. Therefore you must use the same type of battery as the one being used in the product.

The following are the specifications of the battery you are using now.

- Normal voltage: 3V
- Normal capacity: 220mAh
- Continuous standard load: 0.2mA
- Operating temperature: -30 to +60°C

#### CALIFORNIA USA ONLY

This Perchlorate warning applies only to primary CR (Manganese Dioxide) Lithium coin cells in the product sold or distributed ONLY in California USA.  
"Perchlorate Material - special handling may apply,  
See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate)."

### System Shutdown

Turning off the power while the product is in operation, or taking not permitted actions may cause damage to the hard drive or the product. Also it can cause a dysfunction to the hard disk while using the product. Please turn off the power using the **Power** (⏻/⏻) button on the front of your **DVR**. After selecting **"OK"** in the pop-up menu, you can pull off the power cord.

You may want to install a UPS system for safe operation in order to prevent damage caused by an unexpected power stoppage. (Any questions concerning UPS, consult your USP retailer.)

To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

This apparatus shall always be connected to a mains socket outlet with a protective earthing connection.

### Operating Temperature

The guaranteed operating temperature range of this product is 0°C to 45°C (32°F to 113 °F).

This product may not work properly if you run right after a long period of storage at a temperature below the guaranteed one.

When using the device after a long period of storage at low temperature, place the product at room temperature for a while and run it.

Especially for the built-in HDD in the product, its guaranteed temperature range is 5°C to 55°C (41°F to 113 °F). Likewise, the hard drive may not work at a temperature below the guaranteed one.

## STANDARDS APPROVALS



This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



# contents

---

## INTRODUCING YOUR REAL TIME DVR

03

- 03 Controls on the DVR
- 07 Real panel jacks
- 08 Remote control

## INSTALLATION

## CONNECTING WITH OTHER DEVICES

11

- 10 Checking installation environment
- 11 Connecting video, audio, and monitor
- 12 Connecting the network
- 13 Connecting the alarm input
- 14 Connecting the alarm output
- 15 Connecting the RS-485 device
- 15 Connecting the USB

## LIVE

16

- 16 Operating the system
- 16 Live screen mode
- 18 Setting the audio on/off
- 18 Freezing and zooming
- 19 Event monitoring
- 19 Spot-out monitoring

## MENU SETUP

20

- 20 Before use
- 20 User login
- 20 System
- 27 Camera
- 29 Monitoring
- 31 Record mode
- 31 Event record
- 34 Record schedule
- 34 Backup
- 35 Network

## PTZ CAMERA CONTROL

41

- 41 PTZ camera control mode
- 41 Basic operation of pan, tilt & zoom
- 42 PTZ device menu setup
- 42 Preset setup
- 43 Preset name settings
- 43 Camera menu setup

## RECORDING

44

- 44 Rec(normal recording)
- 44 Record schedule
- 44 Event recording

## SEARCH AND PLAY

45

- 45 User login
- 45 Search screen
- 45 Search date & time selection
- 46 Search channel selection & recording graph
- 46 Playback

## APPENDIX


48

- 48 Net I
- 53 Resource
- 54 Recording
- 55 Event
- 56 Network
- 57 System
- 57 Sdb viewer
- 60 SFX player
- 60 WebDVR
- 72 Pop-up menu
- 74 Specifications
- 75 Outline drawings
- 76 Troubleshootings(FAQ)
- 78 Open source license report on the product


# introducing your real time DVR







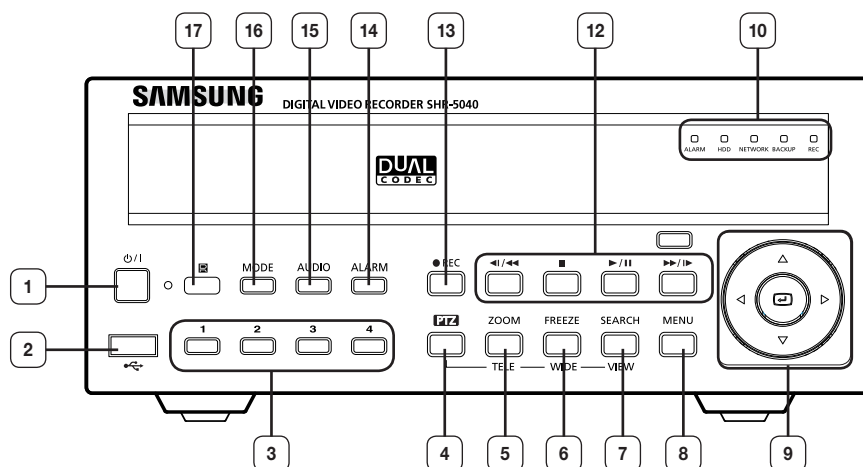


## CONTROLS ON THE DVR

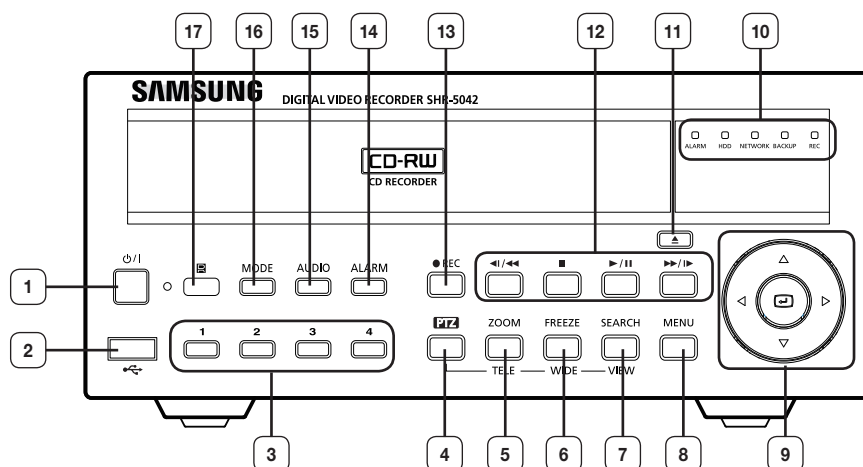












SHR-5040











SHR-5042




No.	Name		Function
1		<b>Power</b> Button	User authentication will be requested if the power button is pressed when you try to terminate the system operation. It is used when you turn on/off the DVR system power.
2		USB Port	This is the port used for connecting a USB type of device. It is used when you upgrade the system software. It is used as a USB mouse connection port.
3		<b>Channel</b> Button	It is used when the channel selected on the Display mode is switched over to the full screen. It is used as a numeric input button from the numeral input mode.
4		<b>PTZ</b> Button	Perform the TELE, WIDE, or VIEW function when selecting the <b>PTZ</b> button.
5		<b>ZOOM (TELE)</b> Button	Provide the function of enlarging the digital image twice as big. Press the <b>Enter</b> (↵) button after designating the area to be enlarged. (Perform the TELE function when selecting the <b>PTZ</b> button.)
6		<b>FREEZE (WIDE)</b> Button	Perform the FREEZE function on the Display mode. (Perform the WIDE function when selecting the <b>PTZ</b> button.)
7		<b>SEARCH (VIEW)</b> Button	This is the function that switches over to the Search mode. (Perform the VIEW function when selecting the <b>PTZ</b> button.)
8		<b>MENU</b> Button	This is the function that switches the system over to the Setup mode. It is used when you move from a lower menu to the upper menu or escape from the system setup mode.
9		<b>Direction</b> Button	<div> <div>◀</div> <div>▶</div> <div>△</div> <div>▽</div> <div><b>Enter</b> (↵)</div> </div> <div> <p>When moving to a menu, they are used as direction buttons. (They are used as the direction buttons for the PTZ operation.)</p> <p>When setting the details of a menu, they are used for changing a value or direction. (They are used as the direction buttons for the PTZ operation.)</p> <p>When setting up a menu, it is used as the <b>Enter</b> button. Press the <b>Enter</b> button when changing the setup value of a menu.</p> </div>

No.	Name		Function	
10	 ALARM	ALARM LED	If an event (like a motion or alarm) occurs, the ALARM LED is lighted on.	
	 HDD	HDD LED	This LED indicates whether the HDD is normally accessed. When accessing the HDD, this LED repeatedly blinks.	
	 NETWORK	NETWORK LED	This LED indicates the status of network connection and data transmission.	
	 BACKUP	BACKUP LED	This LED indicates the status of backup operation.	
	 REC	REC LED	This LED indicates the recording status.	
11		EJECT Button	It performs the open/close function of CD-RW.	
12		Search Button	Fast/Step Reverse	<b>Fast Reverse:</b> This function is used when you perform a fast search in the reverse direction while in play. <b>Step Reverse:</b> This function is used when you search scene by scene in the reverse direction at a Pause state.
			Stop	This function is used when you terminate a search while in play.
			Play/Pause	This function operates by toggling this button for the Play/Pause operation while in play.
			Fast/Step Forward	<b>Fast Forward:</b> This function is used when you perform a fast search in the forward direction while in play. <b>Step Forward:</b> This function is used when you search scene by scene in the forward direction at a Pause state.
13		REC Button	This is the function that records all the camera channels regardless of the recording schedule.	
14		ALARM Button	When an alarm occurs, it cancels the alarm.	
15		AUDIO Setup Button	Set up the audio On/Off function.	

No.	Name		Function		
16	<div>MODE</div> 	Split Screen/ Selection Button	Live Mode		Display the 4-split screens.
					Display the Picture in Picture (PIP) screen.
					Screen Switchover: It will be switched over to the single channel screen according to the time set from the system setup.
		Search Mode/ Selection Button	Search Mode		Display the 4-split screens.
					Display the 9-split screens.
17	<div></div> 	Remote Control Signals Receiver	This is the part that receives the signals of remote controller.		

## REAL PANEL JACKS

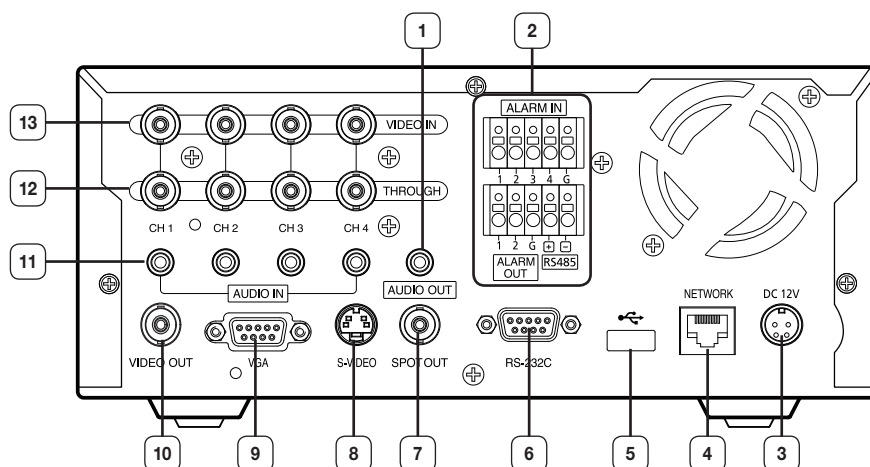


<b>1 AUDIO OUT</b>	This is the port (RCA Jack) for an audio signal output. (When outputting an audio signal, please use the speaker with a built-in audio amplifier.)
<b>2 ALARM</b>	ALARM IN 1~4: This is the port for an alarm input. ALARM OUT 1~2: This is the port for an alarm output. RS485: This is the port for connecting PTZ.
<b>3 DC-IN</b>	This is the connector for a 12V power socket.
<b>4 NETWORK</b>	This is the port for connecting to a network.
<b>5 USB</b>	This is the port for connecting a USB type of device. It is used when you backup a video data or upgrade the system software.
<b>6 RS-232C</b>	This is port for engineering use (no DVR functionality).
<b>7 SPOT OUT</b>	This is the port (BNC-type) for the SPOT OUT output.
<b>8 S-VIDEO</b>	This is the port for the S-Video signal output.
<b>9 VGA</b>	This is the port for the VGA signal output.
<b>10 VIDEO OUT</b>	This is the port (BNC-type) for a composite audio signal output.
<b>11 AUDIO IN</b>	This is the port (RCA Jack) for an audio signal input.
<b>12 THROUGH</b>	The THROUGH port can be used to send a video signal to another video device.
<b>13 VIDEO-IN</b>	This port is the port (BNC-type) for a composite video signal input. It supports both the NTSC and PAL video signals.




# REMOTE CONTROL

## Using the NUMERIC Buttons

<b>CHANNEL 1-9</b>	Press the 1 to 9 button respectively.
<b>CHANNEL 10</b>	Press the 0(10+) button, release, and press the 0(10+) button, release, and wait 3 seconds.
<b>CHANNEL 11-16</b>	Press the 0(10+) button, release, and press the 1 (or 2, 3, 4, 5, 6) button again within 3 seconds.

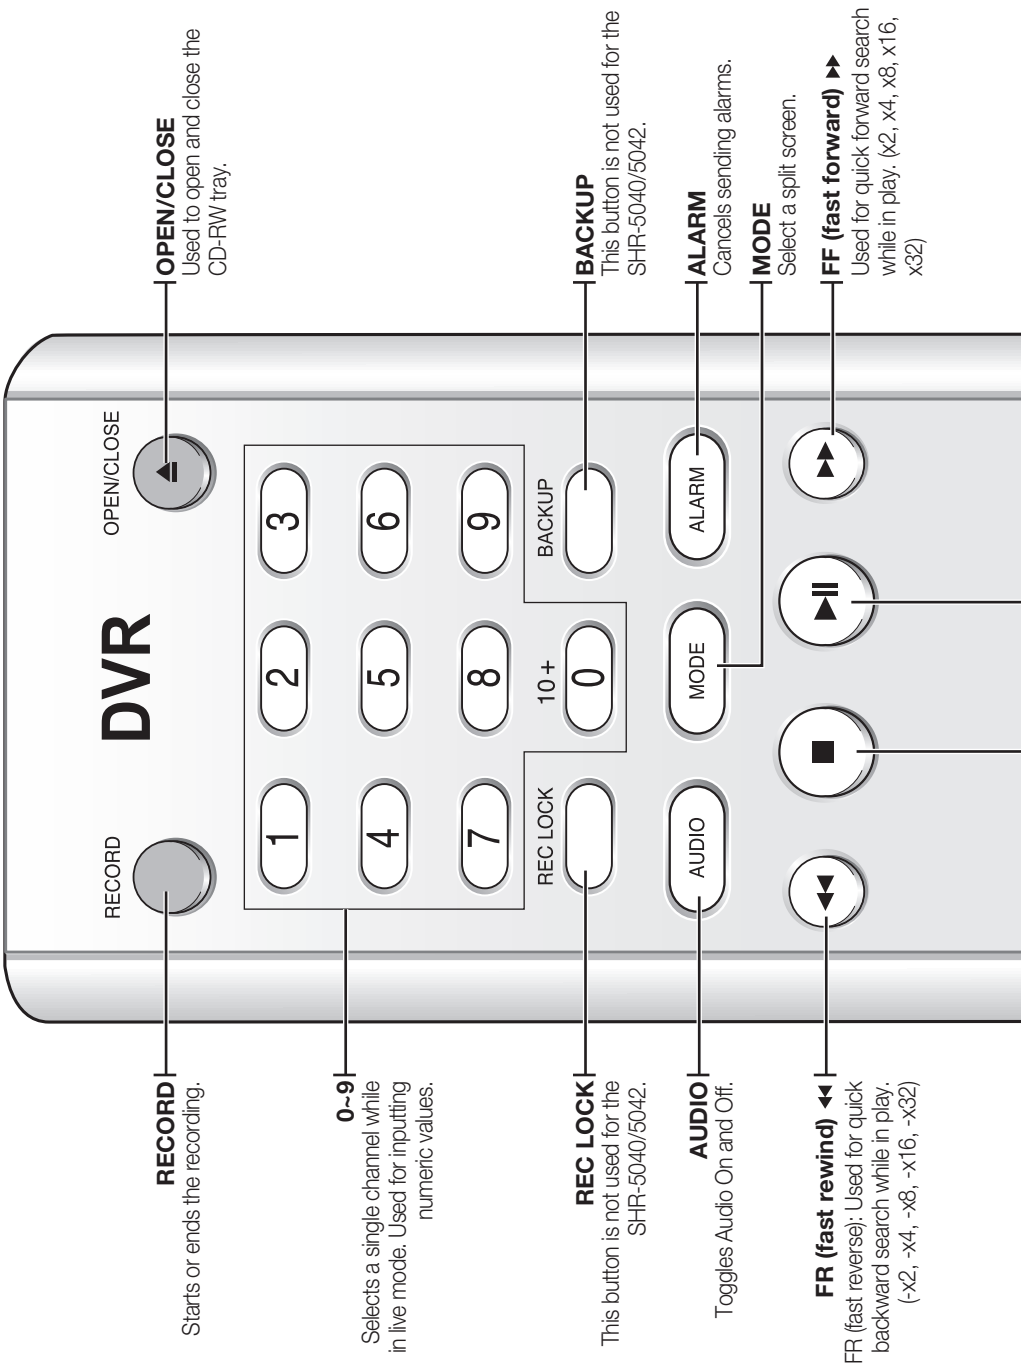

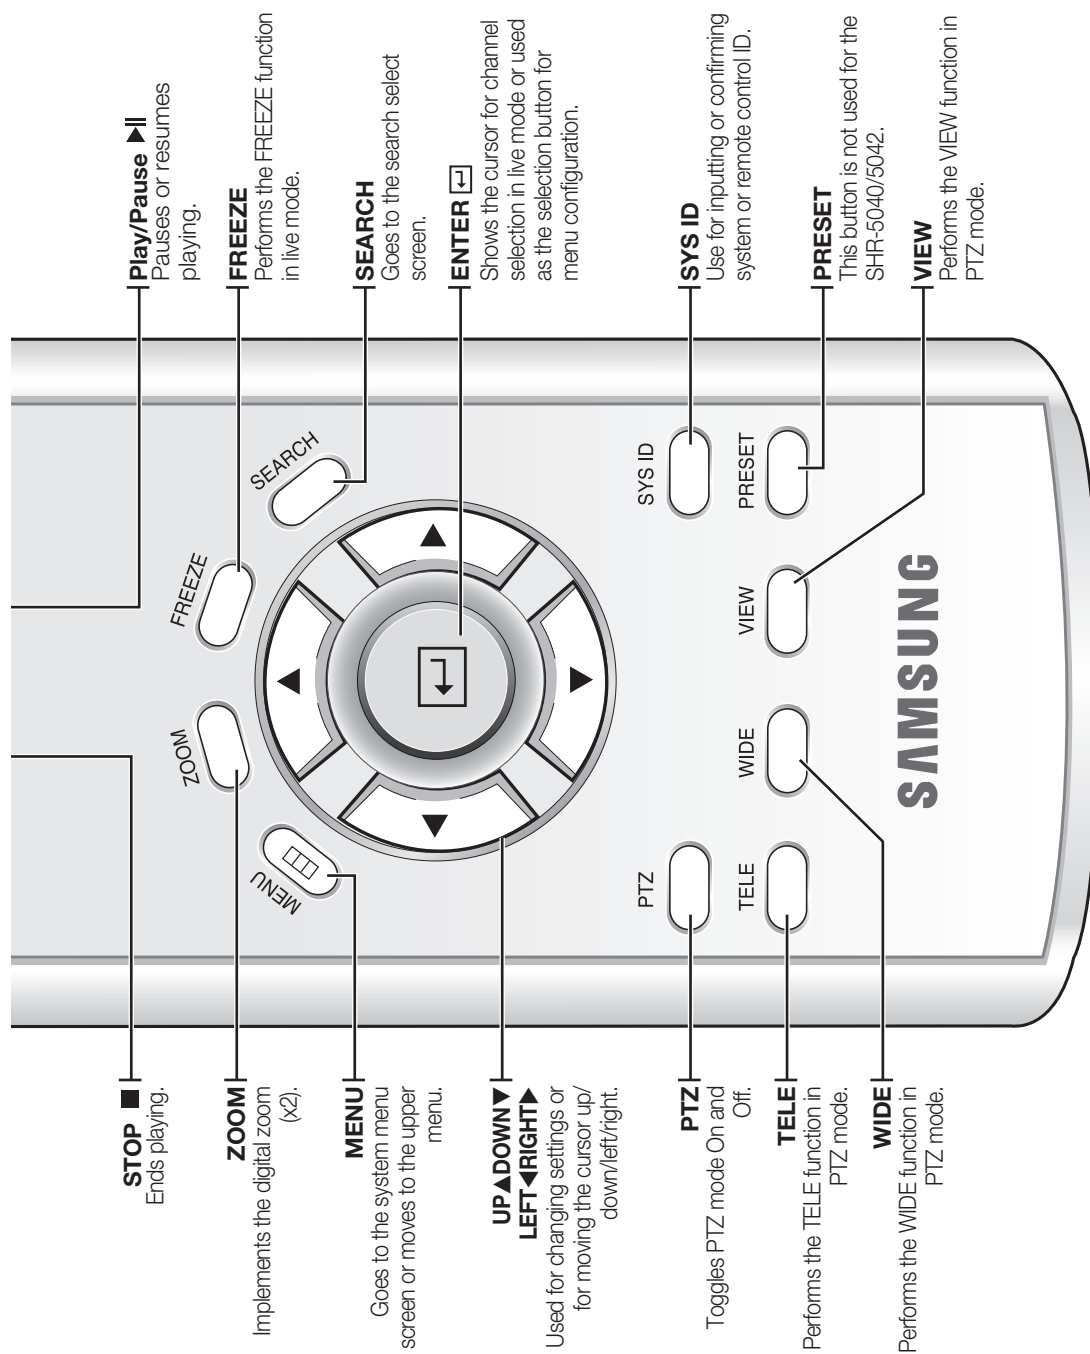

-  • When the product is initially shipped, the remote controller ID is set to '00'.
- When changing the remote controller ID, press the **SYS ID** button and enter the "Remote ID" set to the DVR.

# installation

You should pay attention to the following before you use the product.

- Do not use it outdoor.
- Do not place water or liquid near the connection part or the product.
- Do not impose excessive shock or force.
- Do not pull out the power cord unreasonably.
- Do not disassemble the product on your own.
- Do not exceed the rated input or output voltage range.
- Use the certified power cord only.
- For the product with an input ground, use a power plug with a ground pin.

## CHECKING INSTALLATION ENVIRONMENT

Samsung Digital Video Recorder (hereinafter referred to "DVR") is a high-tech security equipment that contains a high-capacity HDD and top-notch circuits. High temperature inside or outside of the product may reduce the product life, deteriorate performance (see the Figure 1 below; it explains the correlation between temperature and product life), and lead to a malfunction.

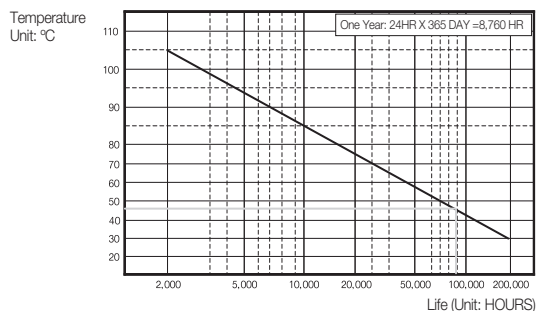


Figure 1

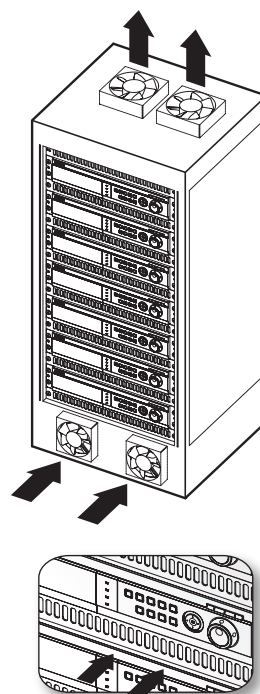



Figure 2

Please keep the following instructions for rack-mounting the Samsung DVRs to proceed with the installation.

1. The rack on which the DVR is mounted should not be sealed off.
2. And it also can allow air circulation through the vent.
3. As shown in the Figure 2, we recommend you to heap the product with other DVRs or use rack-mount devices at a certain space, or install a vent system to accommodate airflow.
4. For forming a natural convection, the air intake hole should be positioned at the bottom and the emission at the top.
5. We recommend you to install each of the air intake and emission holes with fan motors for sufficient airflow. (The air intake fan should be equipped with a filter to prevent possible inflow of dust and other impurities.)
6. As shown in the Figure 1, the temperature inside the rack and around the DVR should maintain between 5 and 45°C.

# connecting with other devices

## CONNECTING VIDEO, AUDIO, AND MONITOR

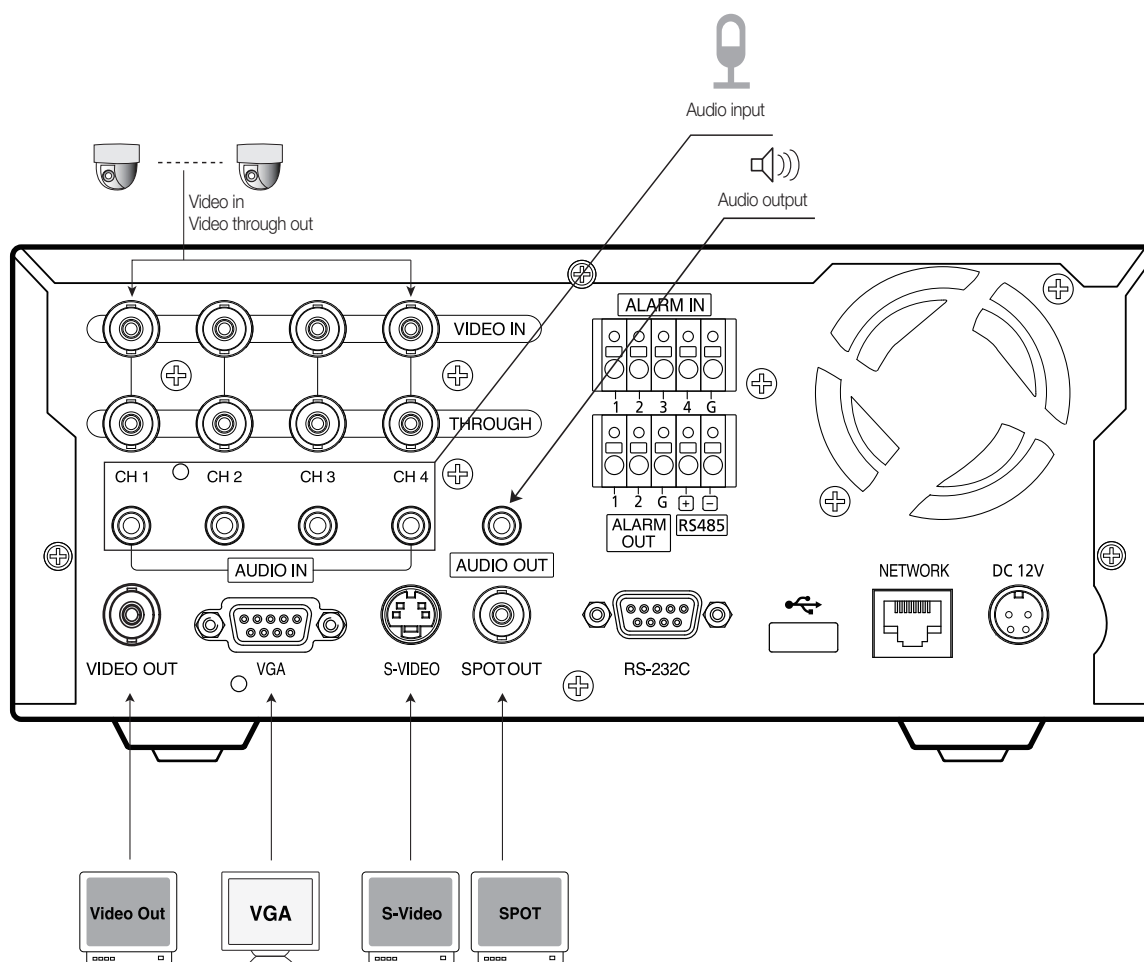


### Caution


- Since it may have a risk of an electric shock on the video cable connected to the camera according to the grounding state of the power cable, please connect the video cable when the system power is turned off.

## CONNECTING THE NETWORK


### Connecting to Internet through Ethernet (10/100BaseT)

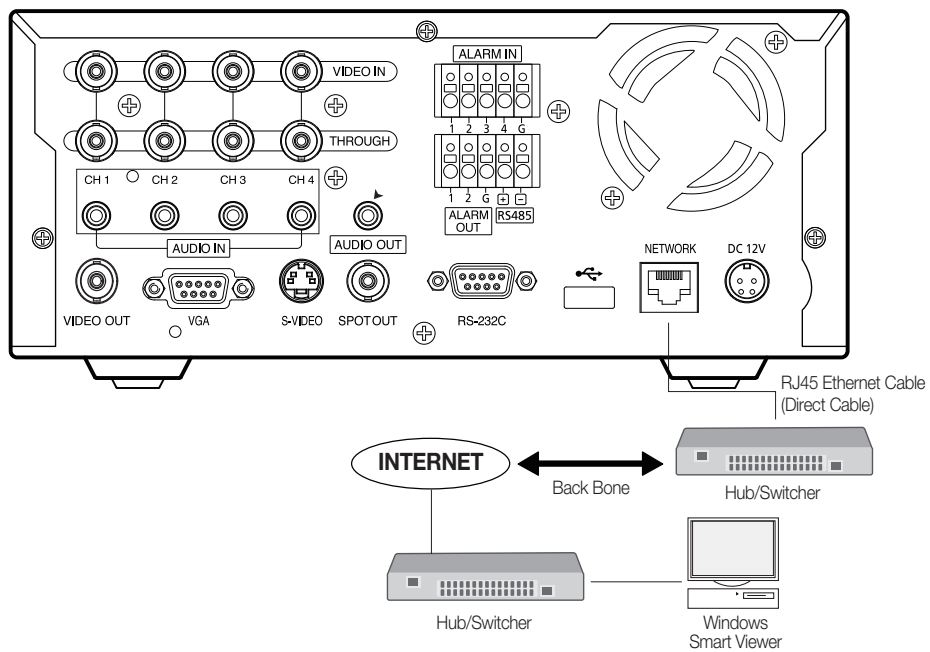

### Connecting to Internet through ADSL

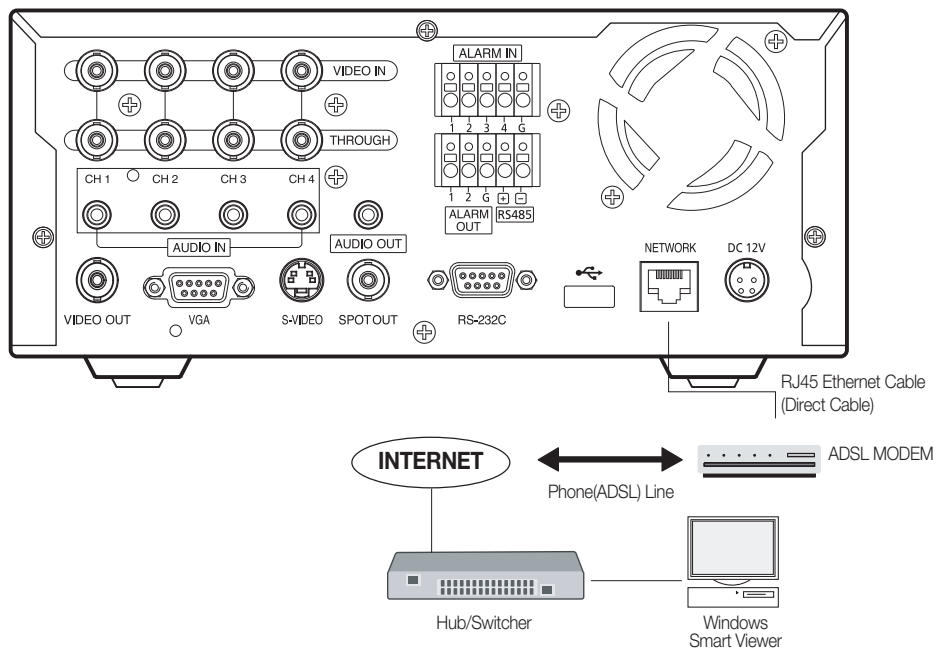

## CONNECTING THE ALARM INPUT

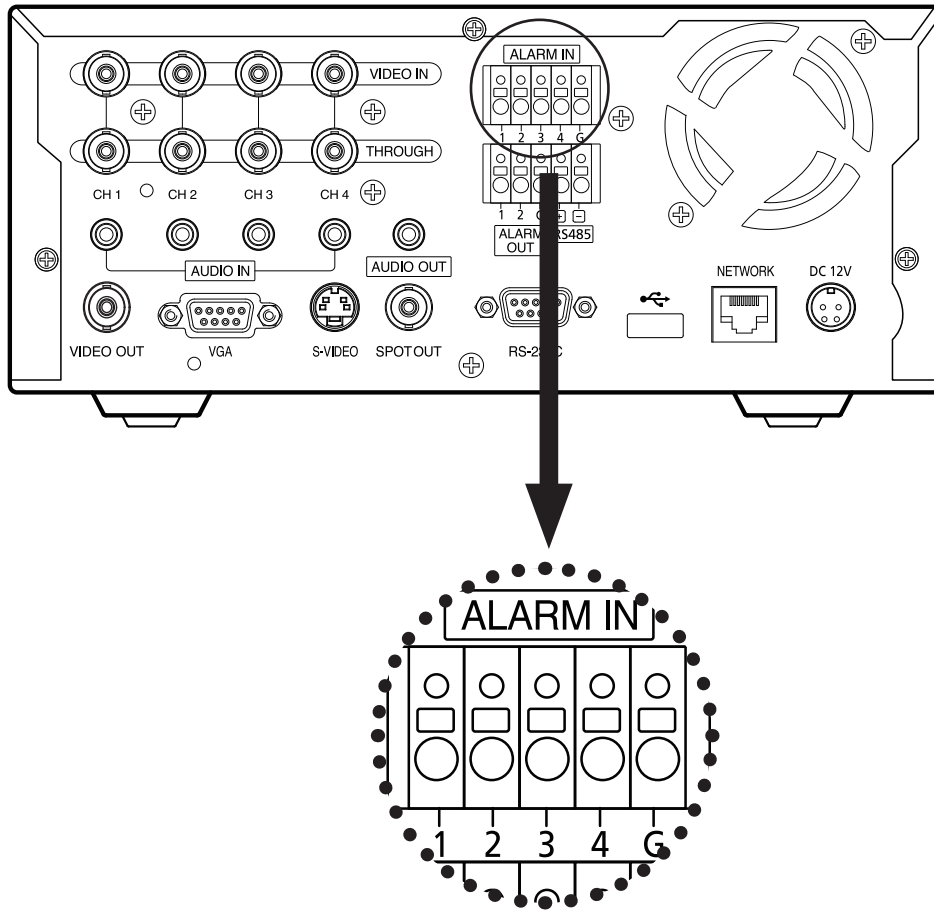


Connect one wire of the signal cable (2 wires) of various sensors (such as IR sensor, hot-wire detector and magnetic sensor) to the GROUND port and connect the remaining signal wire to the desired ALARM input port number.



### Caution

- Please use the power ADAPTER suitable to the power specifications of various sensors.


## CONNECTING THE ALARM OUTPUT

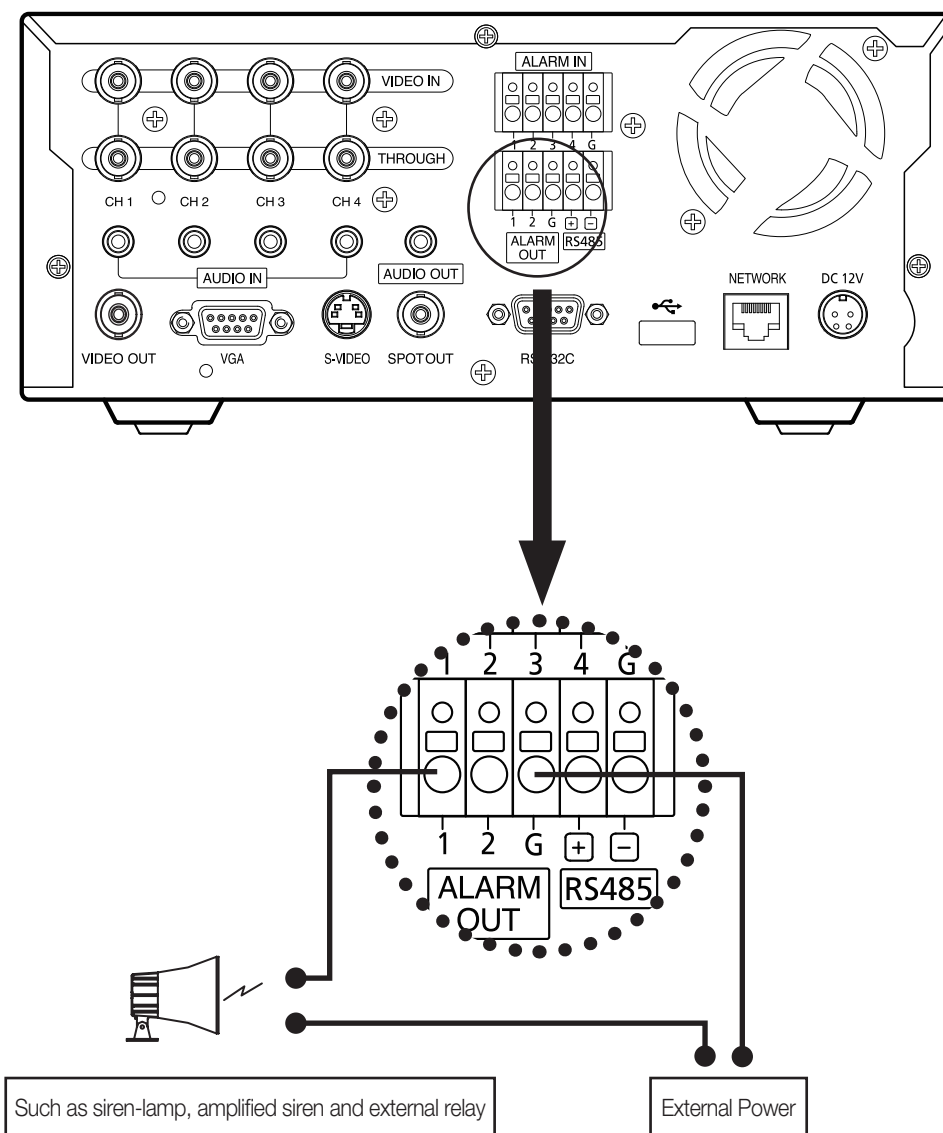

Connect one wire of the signal cable (2 wires) of an external device (such as siren-lamp, amplified siren and external relay) to the GROUND port and connect the remaining signal wire to the desired ALARM output port number.



## CONNECTING THE RS-485 DEVICE

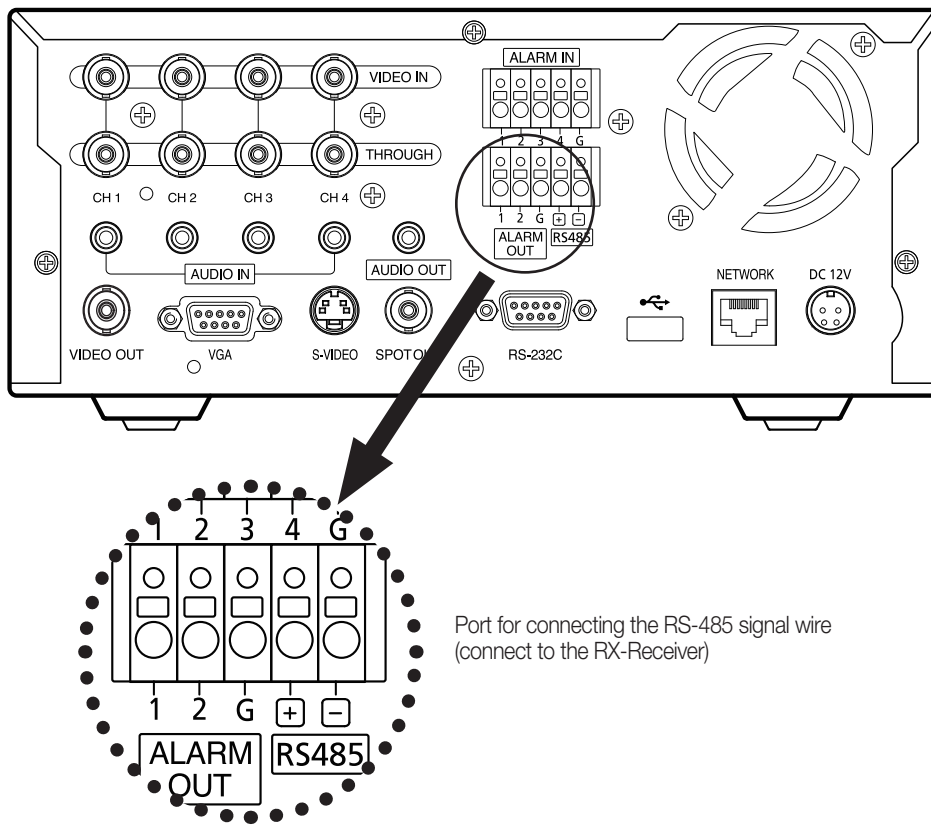

### Caution

- Please check that the RS-485 device is supported by the SHR-5040/5042 product. And, a caution shall be made when connecting to the RS-485 jack since it has the polarity (+ and -).

## CONNECTING THE USB

1. It has a total of 2 USB connection ports on the front and rear sides of SHR-5040/5042.
2. Connect the USB HDD, USB memory through the front/rear ports of SHR-5040/5042.
3. Only one USB device can be connected to each USB port.
4. It provides the hot-plugging function that allows connecting/disconnecting a USB device while operating the system.

## OPERATING THE SYSTEM

Turn on the power and the following Samsung logo appears.



- Perform the initialization job to operate the system after the logo screen has appeared.
- The live video appears if the initialization process is normally completed.
- It may take about 40 to 60 seconds until the live video appears.
- When the live video appears, the system setup environment set previously will be maintained; and if the system has been re-started, the live video will appear and you can start recording.




- When installing a new HDD, it may require much more time until the live video appears due to the HDD initialization time.
- If the live video does not appear, please check whether the internal and external connections are normal. If the problem persists, please contact the place where you have purchased this product.

## LIVE SCREEN MODE

### Live screen icons

The live screen icon indicates the setup and function status of each screen.

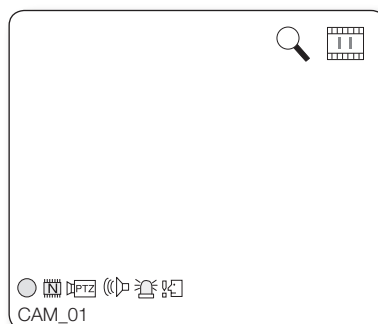

●/E/S : **Recording Icon**

It indicates the states of REC recording / Event (motion + alarm) / Continuous recording.

■/■/■ : **Recording Video Size Icon**

It shows the respective recording sizes of Large/Normal/CIF.

- **Large:** Full D1 - (NTSC) 704X480  
(PAL) 704X576
- **Normal:** Half D1 - (NTSC) 704X240  
(PAL) 704X288
- **CIF:** CIF - (NTSC) 352X240  
(PAL) 352X288

### : **Record Lock** Icon

It indicates that the record lock is activated.  
This icon appears when you are recording video images while the record lock is set. To cancel the recording, enter the preset password.

### / : **PTZ** Icon

The channel that the PTZ function has been set shows the PTZ icon. It is changed to yellow when the PTZ function is now active.

### / : **Audio** Icon

This icon indicates the Audio On/Off state and if it is turned on, the icon is changed to yellow.  
This icon does not appear when the Video or Audio is disabled.

### : **Alarm In** Icon

It appears when an event from the Alarm In is detected.

### : **Motion** Icon

It appears when a motion event occurs.

### : **Zoom** Icon

It appears when the zooming function is active and disappears when it is cancelled.

### : **Freeze** Icon

It appears when the Freeze function is active and disappears when it is cancelled.

### : **Insufficient HDD Space** Icon

It appears when the HDD writing space is not enough.

### : **Screen Switching** Icon

It appears when it is in the screen switching mode.

## **V.Loss / V.Off : Video Input Status**


If no video inputs are detected even when the Video Setup is set to On, the [V.Loss] icon appears on the corresponding channel; and the channel that the Video Setup is set to Off shows the [V.Off] icon.

### **OSD Position Control Function**

- Caution**
- It is possible to control OSD position of CH1, CH3 and CH4 on live screen by Up/ Down/Left/Right buttons when in quad division mode.

## Live screen modes

After taking 4 live video inputs, images are displayed in the following 3 modes.

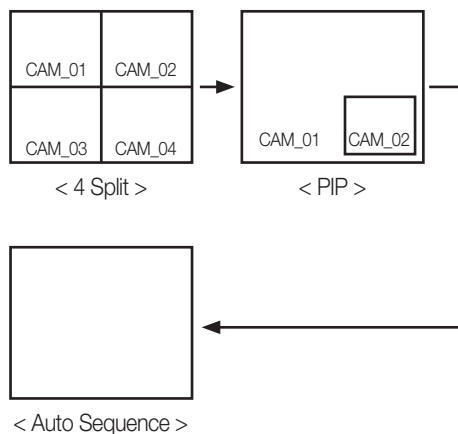

### • **4 Split Mode:**

It shows 4 video channels on the respective split screens. Any channel that is shown on the split screen can be arbitrarily selected.

### • **PIP (Picture in Picture):**


The 1/4-sized small screen appears on the full screen. The channels for both full and small screens can be arbitrarily selected.  
The location of PIP screen can be set to any of 5 locations within the full screen by using the ▲ or ▼ button.

### • **Auto Sequence Mode:**

Multiple channels are sequentially displayed on the full screen at the preset interval.

## Selecting live screen mode

Each mode can be selected by using the **MODE** button and **CH1** to **CH4** buttons.  
The following figure shows the diagram of changing modes.

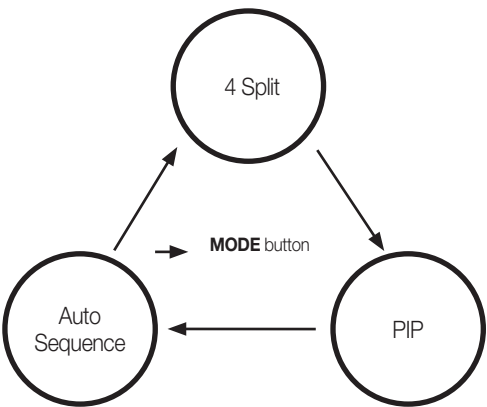

- The starting mode is the 4 split screen mode.
- Modes except for the full screen can be sequentially selected by using the **MODE** button.
- Whenever pressing the **MODE** button, the mode is switched in the following sequence: [4 Split] → [PIP] → [Auto Sequence] → [4 Split].
- You can see the full screen for each channel by selecting the respective buttons of **CH1~CH4**.
- When switching to the full screen from the split screen mode, you can return to the previous split mode screen by pressing the **MODE** button.


## SETTING THE AUDIO ON/OFF

From the split mode except for the auto sequence mode, any channel displayed on each split mode can be arbitrarily selected. Also, in live mode, you can activate or deactivate the channels with Audio On settings.

### Audio On/Off setting in the full screen mode


In the full screen mode, the audio function of the selected channel is automatically turned on and you can set the Audio On/Off function by toggling the **AUDIO** button. The **Audio** icon is changed to yellow or white on the corresponding channel according to the Audio On/Off state.

## Audio On/Off setting in 4-split mode

If you press the **Enter**() button in the 4 split mode, the selection cursor appears as shown in the figure below and the corresponding channel is selected.  
If the **AUDIO** button is pressed after selecting a channel, you can set the Audio On/Off function of the corresponding channel. At this time, the audio icon is changed to yellow or white on the corresponding channel according to the Audio On/Off state.

CAM_01	CAM_02
CAM_03	CAM_04

## Channel Seletion & Audio On/Off Setting in PIP mode

If you press the **Enter**() button in the 4 split mode, the selection cursor appears and the corresponding channel is selected.  
After selecting a channel, you can enter the channel using the **CH1** to **CH4** buttons and can set the Audio On/Off function as in the 4 split mode by using the **AUDIO** button. At this time, the **Audio** icon is changed to yellow or white on the corresponding channel according to the Audio On/Off state.



## FREEZING AND ZOOMING


### Freeze function

The Freeze function, temporarily stops the video on the current live screen but it is active only in the live mode. You can set the Freeze On/Off function by using the **FREEZE** button.

## Zoom function

The Zoom function doubles the size of the selected area but it is active only in the full screen mode.

The zoom setup area appears when the **ZOOM** button is pressed in the full screen mode. You can adjust the location of the zoom setup area by using the **Direction** (▲▼◀▶) buttons. If you press the **Enter**() button after selecting a setup area, the selected area is shown twice as big as the previous size. The image location can be adjusted by using the **Direction** (▲▼◀▶) buttons even after enlarging the size. If the **Enter**() button is pressed again under the enlarged state, it will return to the zoom setup area and you can perform the Zoom Off function by using the **ZOOM** button.

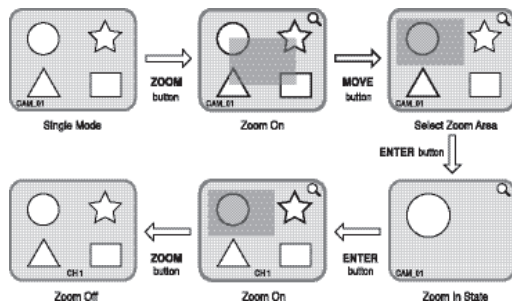

## EVENT MONITORING

The event monitoring function displays the channel linked to the event when a specific event (sensor/motion) occurs. The event monitoring On/Off and event Duration functions can be set by using the command "**MENU**" → "**Monitoring**" → "**Live Mode**".

When the event monitoring time has been set to 30 seconds, for example, the channel-2 appears for 30 seconds in the full screen mode if an event initially occurs in the channel-2 as shown in the figure below. If another event occurs within 30 seconds, it is also displayed together with the existing event.

When events occur from the channels 1 and 3 within 30 seconds after an event has occurred in the channel 2 (as shown in the figure). Then, the channels 1, 2 and 3 are switched to the full screen.


If no new event occurs within the event display duration, it will return to the previous live mode. If you press the **ALARM** button before the event display time exceeds, the event monitoring stops. If an event occurs, the ALARM LED lights and the ALARM LED is turned off if you press the **ALARM** button while the LED lights. The alarm setting is initialized when the **ALARM** button is pressed. In this case, the Event icon disappears. The monitoring function can be cancelled while in event monitoring. The event recording with pre-event time and post-event time resumes after a new alarm occur.

## SPOT-OUT MONITORING

The Spot-out monitoring is the function that monitors the entire screen of a specific channel with the output different from the live screen output. If a monitoring item is selected from the menu screen, you can select a specific channel as the Spot-out channel among the channels 1 to 4 and you can also monitor all the channels at an interval of auto sequence time. The live screen icons do not appear for Spot-out monitoring.

At this time, the auto sequence time interval is identical to the auto sequence time of the live mode.

If the Spot-out event monitoring is active, the channel where an event occurs can be regarded as the Spot-out output. If events occur simultaneously from several channels, the channel with the lowest number has priority and is output to the Spot-out.

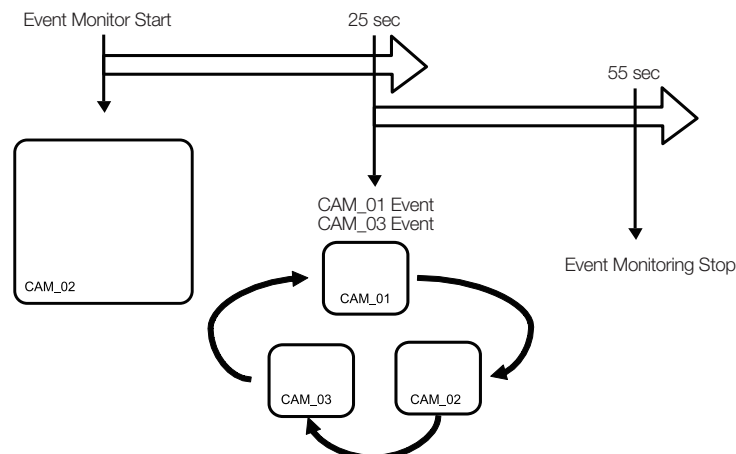

# menu setup

## BEFORE USE

- **Selection**

The yellow cursor shows the current selection window. As for the directional operation, move the cursor on the menu that you want to change by using the **direction** (▲▼◀▶) buttons on the front panel of the system. It enters the sub window if you press the **Enter** (↵) button when the cursor is located on the desired menu. To select an item from the menu, press the **Enter** (↵) button. On a drop-down menu, use the ▲ or ▼ button to move the cursor on your desired item.

- **“OK” and “Cancel” in Each Setup Window**

Once any changes are made in a setup window, they can be applied by selecting “OK”. When “Cancel” is selected, the changed settings are not applied and it returns to the upper menu.

- **MENU and SEARCH Buttons**

The **MENU** or **SEARCH** button, if pressed first, acts as an entrance button. After an entrance menu appears, if the button is pressed, the screen changes to the previous page.

- **Symbol(▶) Next to the Title**


It displays the drop-down menu when selected.

- **Virtual Keyboard**

Inputting characters is enabled by (Keyboard) or (Virtual Keyboard). For entering a character, move the cursor on a desired character key and press the **Enter** (↵) button.

## USER LOGIN


Press the **MENU** button in order to enter the menu screen.

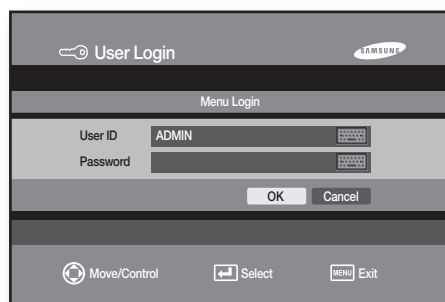


In order to use various DVR functions such as the system environment setup and search, you need to log on to the system with the proper user privilege. You can log on to the system by entering the user ID and password. The default password was not designated. Use it when changing the password.

## SYSTEM


The details of the system menu are as follows:

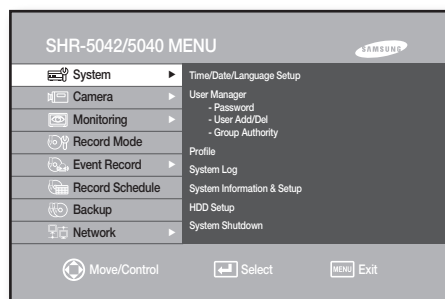


## Time/Date/Language Setup

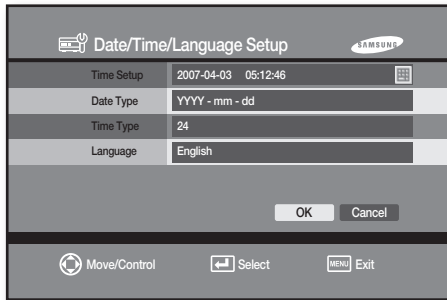


### • Time Setup

The following screen appears if the **Enter**() button is pressed.

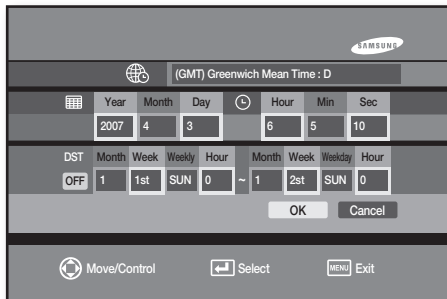

Select the standard time zone suitable to the corresponding region.

To change the date and time, move the cursor to the corresponding item and press the **Enter**() button. Then, change the day/month/year or second/minute/hour using the **▲** or **▼** buttons. Escape from the change mode by pressing the **Enter**() button again. When the time is changed, the date and time will be halted until **“OK”** or **“Cancel”** is pressed.



### Caution

- If the date and time are changed to earlier values, the data written prior to the change may be deleted. For example when the 8 o'clock in the morning is changed to the 7 o'clock in the morning, the data written between 7 and 8 in the morning will be deleted.

### • DST (Daylight Saving Time)

DST sets the clock one hour ahead the local standard time. This setting enables the system to display the time adjusted for DST. If the date set for DST comes, the system time runs one hour faster.

If the DST is set to **“OFF”**, it will not be applied. It is impossible to enter the date menu on the right. When you set the DST to **“ON”**, designate the start time on the left and the end time on the right while basing on the **“~”** mark.

### • Date Type

It supports a total of 9 formats (such as Year-Month-Day / Day-Month-Year / Month-Day-Year).


### • Time Type

It supports two formats of 24 hours / 12 hours (AM/PM).

### • Language

After selecting a language, OSD is displayed in the selected language. The available languages are displayed in the list.


## Password

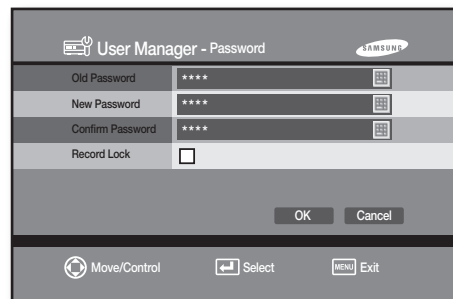

### • Old Password

When this product is shipped, the password of **“ADMIN”** user account will be set to **“4321”**.

### • New Password

A virtual keyboard will appear if the **Enter**() button is pressed. You can input characters one by one up to 16 characters.

### • Confirm Password

This is the menu for confirming a newly changed password. You need to enter **“New Password”** first. If you enter the **“Confirm Password”** first without entering the **“New Password”**, no response is made on the entry.

### • Record Lock

If the **Record Lock** is set to **On**, a pop-up window, asking for the password appears while disabling the recording.



## User Add/Del

The screenshot shows the 'User Manager - User Add/Del' window. It has a title bar with a Samsung logo. The main area contains a form with the following fields: 'User ID' (containing 'user1'), 'Password' (containing '\*\*\*\*'), and 'Group' (containing 'Group 1'). To the right of the form is a table with two columns: 'Group' and 'User ID'. The table contains the following data: Group1 user1, Group1 user2, Group1 user3, and Group2 user4. Below the form are four buttons: 'Add', 'Clear', 'Delete', and 'Delete All'. At the bottom of the window are 'OK' and 'Cancel' buttons.

### • User Add

You may enter “**User ID**” and “**Password**”.

As for the group that the user can belong to, select one from “**Group1**”, “**Group2**” and “**Group3**”.

After granting user rights by each group, designate a user to that group.

If you press “**Add**”, the entry is registered to the list on the right.

If you press “**Clear**”, the User ID and Password on the left are deleted.

### • User Delete

After moving the cursor on the User ID to be deleted from the list on the right, select it by pressing the **Enter**(**[↵]**) button.

If you press “**Delete**”, only the selected User ID is deleted from the list.

If you press “**Delete All**”, all the User IDs registered to the list are deleted.

## Group Authority

The screenshot shows the 'User Manager - Group Authority' window. It has a title bar with a Samsung logo. The main area contains a menu with the following options: System, Camera, Monitoring, Normal Record, Event Record, Record Schedule, Backup, and Network. Below the menu is a search bar and a 'Playback' checkbox. At the bottom of the window are 'OK' and 'Cancel' buttons.

### • Group

User group is divided into 3 groups of Group1, Group2 and Group3.

Press the **Enter**(**[↵]**) button after moving the cursor on the group that a user right is to be granted.

### • Menu

You can grant the system setup and monitoring rights to the group partially or entirely.

As for the right granting setup, you can set/cancel it by pressing the **Enter**(**[↵]**) button after moving the cursor on the corresponding item.

The “**System**” item allows granting the rights for ‘Time/Date/Language Setup’, ‘User Manager’, ‘Profile’, ‘System Log’, ‘System Information & Setup’, ‘HDD Setup’ and ‘System Shutdown’.

The “**Camera**” item allows granting the rights for ‘Camera Configuration’, ‘PTZ Device’ and ‘Screen Setup’.

The “**Monitoring**” item allows granting the rights for ‘Live Mode’ and ‘Spot Mode’.

The “**Record Mode**” item allows granting the setup rights for ‘Quality’, ‘Frame’ and ‘Video Size’.

The “**Event Record**” item allows granting the rights for ‘Event Record Setup’, ‘Alarm Detection Setup’, ‘Motion Detection Setup’ and ‘Video Loss Detection Setup’.

The “**Record Schedule**” item allows granting the recording schedule setup right.


The “**Backup**” item allows granting the backup setup right.

The “**Network**” item allows granting the rights for ‘IP Setup’, ‘IP Test’, ‘DDNS Setup’, ‘NTP Setup’, ‘Callback Setup’ and ‘Transfer Picture Setup’.

## • Search

The “**Playback**” item allows granting the search right.

## Profile

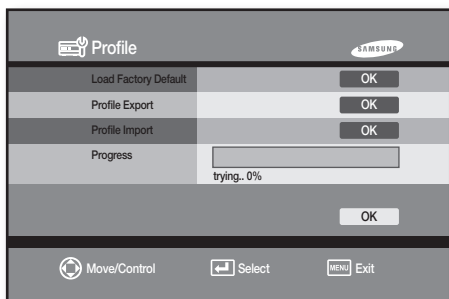

### • Load Factory Default

This function is used when you reset all menu setting values to the factory default values. If you press “**OK**”, the restart message window appears. You can select “**Yes**”. The recorded data will not be deleted.

### • Profile Export

This function is used when you export the profile currently set to the system to the storage device connected to a USB port. The profile file will be copied to the USB memory if you press “**OK**”. (Filename: SetupData.tar)

### • Profile Import

This function is used when you import the system profile file stored in a USB memory and apply to the current system. The profile file will be copied to the current system if you press “**OK**”. Then, the restart message window appears. You can select “**Yes**”.


### • Progress

This function will show the progress status of the job that the system is currently executing.

## Caution

- Please do not remove the USB memory when you run the profile export/import function. The system profile file may not be copied properly or may not be applied to the system.
- When the system profile file that is included the value for network setup applies for another DVR, an IP address conflict may occur due to the same address. If so, please reset the network configuration to avoid an IP address conflict.

## System Log

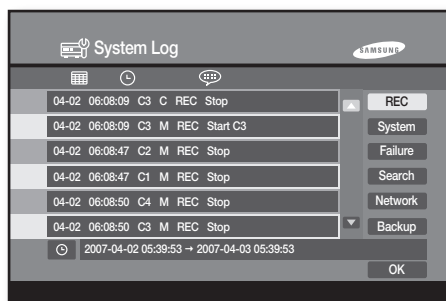

This function shows a series of logged tasks made in operating the DVR system and when the system runs abnormally, it allows finding the error easily so that the problem can be fixed.


Press the **Enter** (↵) button after moving the cursor on the desired log item.

⬅: Move to the previous page.

➡: Move to the next page.

### • Scope Designation

If the (🕒) icon is pressed, the following screen appears.

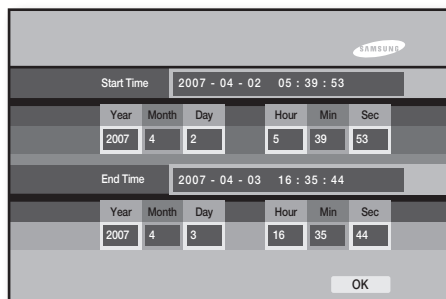

For the log data, set the “**Start Time**” and “**End Time**” to be searched. To change the date and time, move the cursor to the corresponding item and press the **Enter** (↵) button. Then, change the day/month/year or second/minute/hour using the **▲** or **▼** buttons. Escape from the change mode by pressing the **Enter** (↵) button again.

- **REC**

Displays the recording information according to the recording event and schedule.

- **System**

Displays the system start/stop, system access user and setup change information.

- **Failure**

Displays the error information that occurs due to the hardware failure.

- **Search**

Displays the time information between the entry and exit of the search mode.

- **Network**

Displays the time and IP address for the connected system through the remote software.

- **Backup**


Displays the backup information.

## System Log List

Log Type	Log Details	Description
REC	C(Channel) C REC START/STOP	Continuous Recording Start/Stop
	C(Channel) A REC START/STOP	Alarm In Recording Start/End
	C(Channel) M REC START/STOP	Motion Recording Start/End
System	SYSTEM START/STOP	System Power ON/OFF
	SYSTEM NET TIMESET	System Time Change
	SYSTEM SHUTDOWN	System Termination
	SYSTEM REBOOT	System Restart
	SETUP START/END	Menu Mode Login/Logout
	WEAK SIGNAL START CH	Weak Video Output Signal
	WEAK SIGNAL STOP CH	Video Output Signal Restoration
	HDD Format M	HDD(Master) Format
	HDD Format S	HDD(Slave) Format
Failure	VIDEO LOSS START/STOP	Video Loss/Recovery
	FAN FAILURE/RECOVERY	Fan Failure/Recovery
	SMART ERROR HDD-M	HDD(Master) Smart Check Failure
	SMART ERROR HDD-S	HDD(Slave) Smart Search Failure
	HDD ERR COUNT M	HDD(Master) Write Error Count
	HDD ERR COUNT S	HDD(Slave) Write Error Count

Log Type	Log Details	Description
Search	SEARCH IN/OUT	Login/Logout with the Search Mode
Network	NETWORK CONNECTED	Remote Software Connection
	NETWORK DISCONNECTED	Disconnecting the Remote Software Connection
BACKUP	BACKUP AVI-OK/FAILED	AVI Backup Success/Failure
	BACKUP SDB-OK/FAILED	SDB Backup Success/Failure
	BACKUP SFX-OK/FAILED	SFX Backup Success/Failure
	BAKCUP BMP-OK/FAILED	BMP Backup Success/Failure
	BACKUP JPEG-OK/FAILED	JPEG Backup Success/Failure
	USB PROBLEM DETECTED	Removing the Media While Backing up to a USB Storage
	CD-ROM WRITE FAIL	CD Write Failure
	CD Media Size Full	No CD Space Remained
	CD Media Not Exist	No CD Media

## System Information & Setup

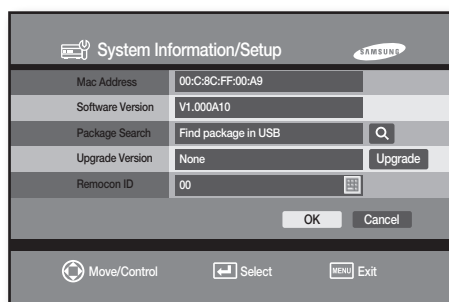


- **Mac Address**

Displays the unique number of the network hardware device attached to the system.

- **Software Version**

Displays the current software version.

- **Package Search**

After connecting the USB device (holding the DVR software) to a USB port, press the  icon and the DVR software will be automatically searched. If the DVR software does not exist in the USB device, the upgrade version will not be displayed.

- **Upgrade Version**

The software version to be upgraded will be shown. If you press the **Upgrade**, the restart message window appears. You can select **Yes** to proceed with the upgrade.

- **Remocon ID**

In order to control the DVR with a remote commander, set the DVR and the remocon ID.


## Caution

- For the DVR to recognize the update file the file should be inserted into a folder named "update". So this folder should be created on a USB memory and then the upgrade file copied inside the folder.
- When upgrading the software, you must neither turn off the power nor remove the USB device. The system may run abnormally.
- When using a USB memory, please use the USB device that can support Linux 2.6.0 or higher. The system cannot support the device that does not support Linux.
- The file system for the USB device must be either FAT16 or FAT32. The system does not support NTFS or other file systems.
- Since some USB devices either have no power supply or have a low voltage, a separate power supply may be needed to recognize them.



- When shipping this product, the remote controller ID is set to '00'.
- When changing the remote control ID, press **"Remocon ID"** and enter the DVR ID.


## HDD Setup

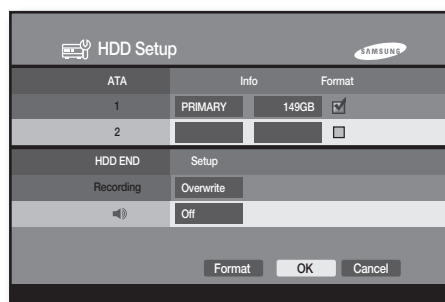

- **HDD Info**

Shows the installed HDD information and the capacity. The first installed HDD is displayed as the Primary and the second HDD is shown as the Secondary.

### • HDD Format

When initializing the HDD, move the cursor to the corresponding HDD and press the **Enter**() button. Then, the (Format) icon is activated.

If you press "**Format**", the HDD format window appears. You can select "**OK**" to initialize the HDD.

### • HDD END

**Stop:** Recording stops when the HDD becomes full while in recording.


**OverWrite:** If the HDD becomes full while in recording, the data recorded at the earliest time will be deleted and new data will be written.

### • HDD END ALARM ()

**On:** If the HDD becomes full while in recording, it gives an alarm.

**Off:** If the HDD becomes full while in recording, it does not give any alarm.



- If the HDD space is not enough, the Disk\_Full () icon appears.



### Caution

- Because all data will be deleted when the HDD formatting is executed, please proceed with the initialization after backing up important data to other place.
- If the repeated HDD recording is set to "**OverWrite**" and the data to be backed up are overwritten, either the backup start time can be changed or the backup is cancelled.



### Caution

#### Checking HDD Data

Please, pay attention to Following information to minimize the chance of losing HDD data.

- Remember that you should protect HDD from any impact or misuse as this may cause damaged.
- The Manufacturer is not responsible for missing data or defects caused by the user's mishandling.

**Note:** Adding Extra HDD.


Check in advance that the HDD is compatible with the manufacturer's DVR.

Examples that can cause loss of data or damage HDD.

- Any outside Impact on the case which could happen whilst disassembling or setting up the DVR.
- Power cut or incorrect shutdown whilst the DVR is operating. (Refer to page 27: how to turn off DVR)
- Moving or causing any impact on the DVR during operation.

Please, back up events as soon as possible to minimize disappointment should HDD data be lost.

## System Shutdown

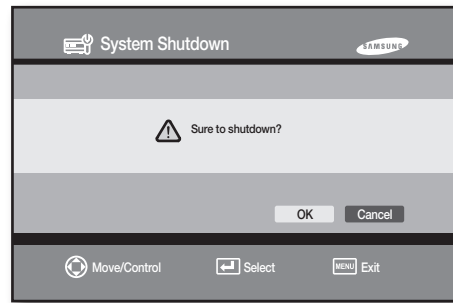

This function is used when either terminating the running jobs safely or turning off the power.

If you see the system shutdown message after pressing "**OK**" on the confirmation window, turn off the power.




### Caution


- If the system is turned off without terminating it using the system shutdown menu, it may cause a problem such as data loss and disk failure. When turning off the power, please terminate the system first using the system shutdown menu.

## CAMERA

The details of the camera menu are as follows:

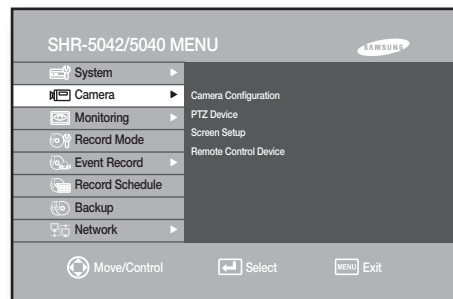

## Camera Configuration

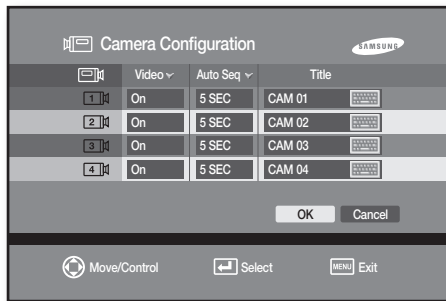

- **Video**

**On:** It shows the video of the selected channel.

**Off:** It does not show the video of the selected channel.

**Covert:** It shows the remaining information except for the video information of the selected channel. The functions such as audio/camera name/auto sequence are not available for the Off channel.

- **Auto Seq**

You can set the auto sequencing interval for each channel. The setting applies in the live mode. The channel set with **“Off”** or **“Covert”** is not shown in the auto sequence mode.


- **Title**

The camera name of the selected channel can be set. A virtual keyboard appears if you press the **Enter** (↵) button.

Characters can be input one by moving the cursor. You can input up to 10 characters. If you press **“Shift”**, you can input the uppercase letters and numeric keys.



## PTZ Device

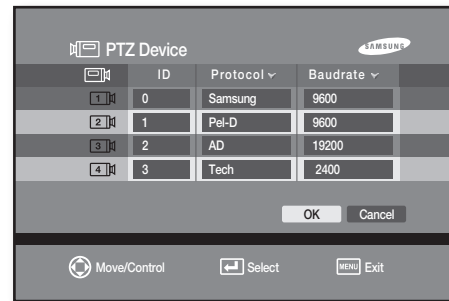

- **ID**

Select the PTZ ID(0~99).

- **Protocol**

In order to set the PTZ function, move the cursor to the desired channel and press the **Enter** (↵) button. Then, select PTZ by using the **▲** or **▼** button. Escape from the change mode by pressing the **Enter** (↵) button again. This product supports the protocols of Samsung, Vic., Pan., AD, Phi., Pel-D, Pel-P, Em, Vcl., Dia., Kal., and Tech.

- **Baudrate**


Select the PTZ Speed.  
(2400/4800/9600/19200/38400)



- The above items should be matched with the settings of PTZ device. For more details, please refer to the manual provided by the PTZ device manufacturer.

- Only the Half Duplex method is supported for transmission.

## Screen Setup

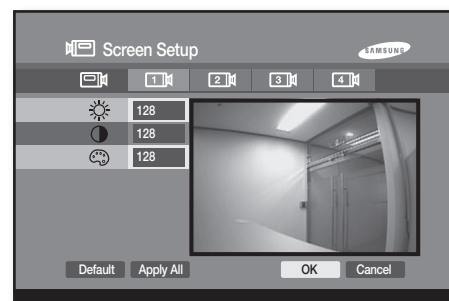

This is the screen that sets the Brightness/Contrast/Color values for the camera image of each channel. Place the cursor on the desired channel for adjustment and select it to set the Brightness/Contrast/Color values.




The selected channel appears within the PIP zone on the right.

The adjustment can be made from '0' to '255' using the ▲ or ▼ button.

If you press "**Apply All**", the values for the last updated channel are copied to entire channels.

If you press "**Default**", the values for the current channel are reset with '128'.

## Remote Control Device

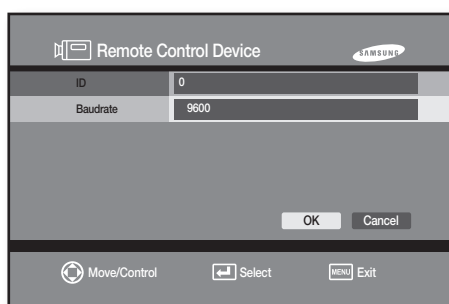

This window allows you to control the functions of DVR by using the system controller keyboard (SSC-2000).

- **ID**

Selects the ID of the system controller keyboard.

- **Baudrate**

Selects the transmission speed of the system controller (1200/2400/4800/9600/19200/38400).

### Available System Controller Keyboard


NO	Manufacturer	Model Name
1	SAMSUNG	SSC-2000




- The items above should match the settings of the system controller keyboard. For further information, refer to the manual provided by the manufacturer of the system controller keyboard.
- This device supports only half duplex as a transmission method.

## MONITORING

The details of the monitoring menu are as follows:

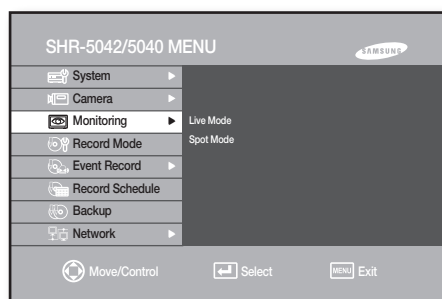

### Live Mode

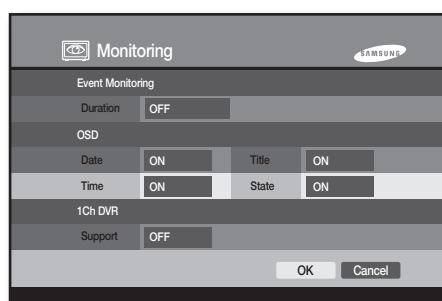

- **Event Monitoring Duration**

It can be set to any of Off, 30 seconds, and CONTINUE.

**OFF:** The event monitoring that switches to the event screen does not operate.

**30 Seconds:** It sets the display duration of the current channel until the next channel is displayed.

**CONTINUE:** The event monitoring screen will be maintained until it is cancelled by pressing the **ALARM** button on the front panel.

- **OSD**

**Date:** When it is On, the date will be displayed on the screen. When it is Off, the date will not be displayed on the screen.

**Time:** When it is On, the time will be displayed on the screen. When it is Off, the time will not be displayed on the screen.

**Title:** When it is On, the camera name will be displayed on the screen. When it is Off, the camera name will not be displayed on the screen.

**State:** When it is On, the Audio/PTZ will be displayed on the screen. When it is Off, the Audio/PTZ will not be displayed on the screen.


### • 1Ch DVR

The 1-channel DVR is supported. If the 1-channel support is set to On, it becomes the 1-channel DVR; and if the 1-channel support is set to Off, it becomes the 4-channel DVR. If the 1-channel support is On, the system will be restarted and it becomes the 1-channel DVR.

### Caution

- If the 1-channel support is enabled, the functions such as Event Monitoring, Spot Out Channel and Spot Out Event Monitoring are not available. As for the resolution of 1-channel support, Full D1, Half D1 and CIF are supported.
- If the 1-channel support is Off and the Full D1 is set, the resolution in the 4-channel mode becomes CIF.
- When setting up the 1-channel mode, the system setup values will be initialized.
- Displays 640x480(60Hz) VGA output on NTSC and PAL.
- Some noise on vertical lines or oversized image can occur on LCD monitor if 640x480 mode is not available.

## Spot Mode

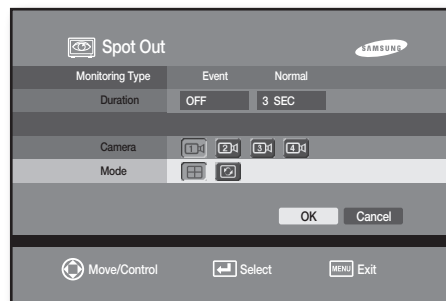

When you have two monitors, the Spot Out channel can be used for monitoring a specific channel on a dedicated monitor.

### • Event Duration

Sets whether or not to run the Event Monitoring function for the Spot-out channel. It can be set to any of Off, 30 seconds, and CONTINUE.

**OFF:** The Event Monitoring function is not available on the Spot Out channel.

**CONTINUE:** The Event Monitoring screen will be maintained until it is cancelled by pressing the **ALARM** button on the front panel.


### • Normal Duration


**1~60 Seconds:** It sets the display duration of the current channel until the next channel is displayed.

### • Camera

Sets the desired channel for use with the Spot Out function.


### • Mode

(): This is the mode that outputs the Spot Out channel with a 4 split screen.

(): This is the mode that switches the Spot Out channel screen in the full screen mode.

## RECORD MODE

The details of the record menu are as follows:

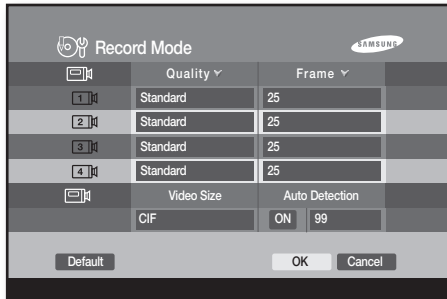

Set the recording mode values to be applied when pressing the **REC** button on the front panel.

- **Quality**

Sets the recording video quality.  
Set to any of Very High, High, Standard and Low.

- **Frame**

Sets the number of frames for recording. The number of frames refers to the number of screens recorded per second.

- **Video Size**

Set the screen size for recording.

Video Source	Full D1	Half D1	CIF
NTSC	704 X 480	704 X 240	352 X 240
PAL	704 X 576	704 X 288	352 X 288


- **Auto Detection**

You can select any of **OFF** and **ON** by pressing "**OFF**." If "**ON**" is selected, the date for search is limited. The date can be limited to 1 to 99 days. If "**OFF**" is selected, the cursor cannot be moved to the date selection area and the date for search is not limited. If you press "Default", it returns the initial values.


The Normal Recording frame rate should be set less or equal to the event recording frame rate.

## EVENT RECORD

The details of the event recording are as follows:

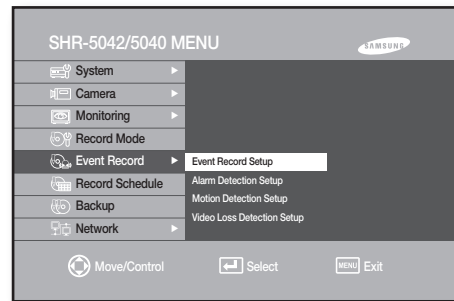

### Event Record Setup

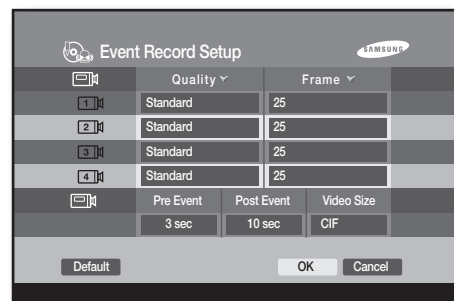

Set the recording mode values to be applied when an event occurs.


- **Quality**

Sets the recording video quality for any event.

- **Frame**

Sets the number of frames for recording. The number of frames indicates the number of screens recorded per second.


- **Pre Event**

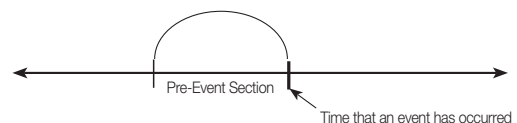

Record the pre-conditions from the point that an event has occurred.

**3~5 Seconds:** Set the recording time prior to the event occurrence.

### • Post Event

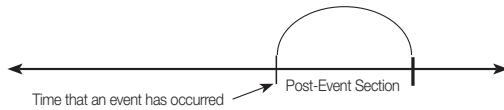

Record the post-conditions from the point that an event has occurred.

**5 Seconds~5 Minutes:** Set the recording time after the event occurrence.

### • Video Size

Screen setup size displayed on record mode.

Video Source	Full D1	Half D1	CIF
NTSC	704 X 480	704 X 240	352 X 240
PAL	704 X 576	704 X 288	352 X 288



- If the 1-channel DVR support is set to On in the monitoring menu, the resolution is changed to Full D1.

## Alarm Detection Setup

Alarm In	State	Camera	Alarm-Out	Duration
Alarm In 1	N.O	1	None	10 SEC
Alarm In 2	N.O	2	None	10 SEC
Alarm In 3	N.O	3	None	10 SEC
Alarm In 4	N.O	4	None	10 SEC

### • State

The Alarm In type can be set to "N.O" or "N.C".

**N.O (Normally Open):** Sensor remains open. But if it gets closed, an alarm is issued.

**N.C (Normally Closed):** Sensor remains closed. But if it gets open, an alarm is issued.

### • Camera

Sets the camera linked to the current Alarm In. The default value is set to the current Alarm In number. At least one link between Alarm In and camera has to be established. Multiple selections are possible. The following screen will appear if the **Enter** button is pressed by moving the cursor from the camera item.

### • Alarm Out

Sets an alarm-out method when an event has occurred from the Alarm In.

Currently, this system supports 2 Alarm Out functions and 1 built-in speaker (beep) output.

The following screen will appear if the **Enter** button is pressed by moving the cursor from the Alarm Out item.


### • Duration

Sets the duration for Alarm Out. The alarm sound will be maintained with the value set.

**CONTINUE:** The alarm output sound will be maintained until it is cancelled by pressing the **ALARM** button manually on the front panel.

**10~300 Seconds:** You can set the duration for the alarm output.

## Motion Detection Setup

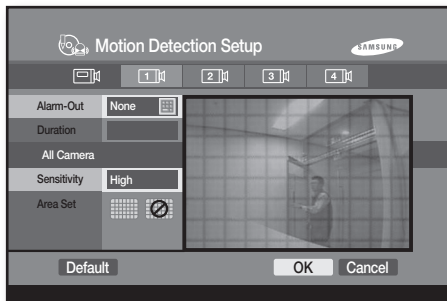

Set the motion detection area, sensitivity and alarm for each camera video.

Press the **Enter**() button after moving the cursor on the camera to be set.

- **Alarm Out**

It sets the alarm output when a motion is detected. Currently the system supports 2 Alarm Out functions and 1 built-in speaker output.

- **Duration**

Sets the duration for Alarm Out. The alarm sound is sustained for the preset period.

**CONTINUE:** The alarm output sound will be maintained until it is cancelled by pressing the **ALARM** button manually on the front panel.

**10~300 Seconds:** Sets the duration for alarm output.


- **Sensitivity**


It relates to configuration for motion detection and sensitivity.

The sensitivity can be set to Very High, High, Medium, Low or Very Low.

- **Area Set**


If you press the **Enter**() button after moving the cursor to the video display area on the right, the motion area can be set/cancelled.

: Sets the whole part as the motion area.

: Cancels the whole motion area.

If you press "**Default**", the motion setup is reset to the initial values.

## Video Loss Detection Setup

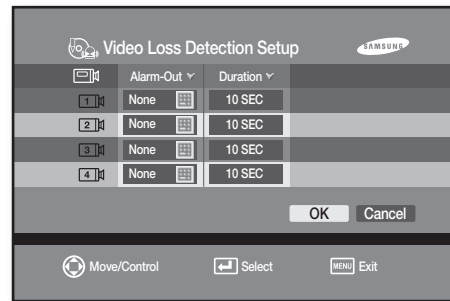


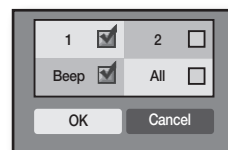
If a video loss occurs from each channel, it can be set to generate an alarm output sound.

- **Alarm Out**

Sets an alarm-out method when an event has occurred from the Alarm In.

Currently, this system supports 2 Alarm Out functions and 1 built-in speaker (beep) output.

The following screen appears when you press the **Enter**() button after moving the cursor to the Alarm Out item.



- **Duration**


Sets the duration for Alarm Out. The alarm sound is sustained for the preset period.


**CONTINUE:** The alarm output sound is maintained until it is cancelled by pressing the **ALARM** button manually on the front panel.

**10~300 Seconds:** Sets the duration for alarm output.



# RECORD SCHEDULE


The details of the record schedule menu are as follows:

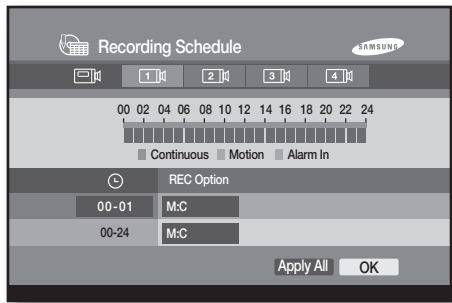


You can set the system to automatically record images by setting the desired time frames. Press the **Enter**() button after moving the cursor on the camera to be set.

### • Time Selection

In order to select the recording time slot hourly, move the cursor to the part shown as in the figure below and press the **Enter**() button. And, select the recording time slot while using the **▲** or **▼** button. You can exit from the change mode by pressing the **Enter**() button again.

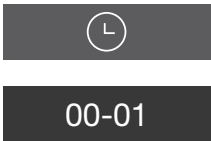


### • REC Option

Sets the recording method. Please see the following table for the types of recording methods. You can apply the preset recording method for the selected time slot if the **▲** or **▼** button is used after pressing the **Enter**() button.  
“00-24”: The recording method can be identically set to a range between zero hour and 24 hours. If you press “**Apply All**”, the values for the current channel are copied to entire channels.

Recording Type	Recording Support	Setup Screen Symbol
C: Continuous M: Motion A: Alarm In	No Recording	NONE
	Continuous Recording	C
	Motion Recording	M
	Alarm In Recording	A
	Continuous & Motion Recording	C : M
	Continuous & Alarm In Recording	C : A
	Motion & Alarm In Recording	M : A
	Continuous & Motion & Alarm In Recording	C : M : A



# BACKUP

The details of the backup menu are as follows:

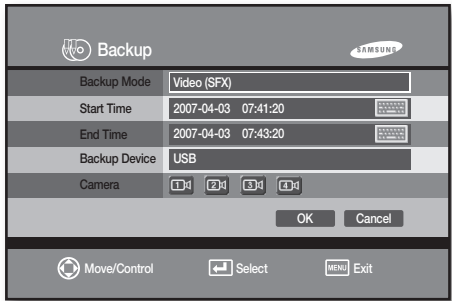

This is to back up the video data stored on the HDD to a backup device.

### • Backup Mode

Selects which mode is to be used for backup. The backup mode supports three types in total such as SDB, SFX, and AVI. Press the **Enter**() button and select the backup mode by using the **▲** or **▼** button. You can exit from the change mode by pressing the **Enter**() button again.

**Samsung Database (SDB):** This is a proprietary data type of Samsung. Once data is backed up in SDB, the backup data are automatically copied into the SDB Viewer as well as the SDB. Typically, the SDB is used to back up mass storage data.



**SFX:** This mode runs a backup job together with the auto-executable video player. If the backup file is executed, the player will be automatically launched to play the video. The SFX backup data is saved with an executable file extension (.EXE).

**AVI:** This mode saves in the video format that can be played from the Windows Media Player.

### • Start Time & End Time

Sets the date and time for backup.

### • Backup Device

Sets the storage device for backup. The backup device supports the USB storage device and CD. Press the **Enter**() button and select the backup device by using the **▲** or **▼** button. Escape from the change mode by pressing the **Enter**() button again.

### • Camera

Sets the camera channel for backup.



- The backup file can be played on PC, but can not be played from a DVR.
- In case of the AVI backup, you may need a DivX codec to play the saved file. You can obtain the DivX codec from the website [www.divx.com](http://www.divx.com).
- It is recommended to use K-lite codec standard.
- A warning message appears if no backup device exists.
- For a watermark, insert a mark that only the manufacturer knows into the video data lest a person should identify the mark with naked eyes. If the saved video data are forged or altered, "Tampered" will be displayed on the screen of the SDB Viewer or SFX Player. If not, "Approved" will be displayed.




### Caution


- Please do not remove the storage device during backup or do not turn off the system power. The system may run abnormally.
- The system speed may be slowed down during backup.
- When backing up the data to CD, the recorded data may be damaged according to the conditions of disk recording surface.

## NETWORK


The details of the network menu are as follows:

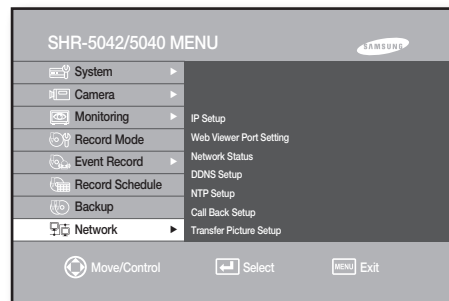

### IP Setup

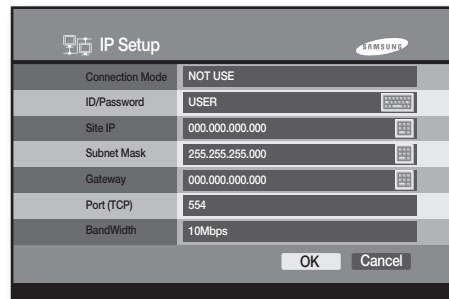

### • Connection Mode

Sets the network type for the main system. Press the **Enter**() button and select the network by using the **▲** or **▼** button.

**NOT USE:** Select it when you do not use a network.

**STATIC-IP:** Select it when the main system is connected to the network that is using the fixed IP.


**DHCP:** Select it when the main system is connected to the network whose IP address is dynamically assigned by DHCP.

**ADSL(PPPoE):** Select it when the main system is connected to the ADSL network using PPPoE.

### • ID/Password

You can manually enter the ID/PASSWORD when ADSL is selected.

When the main system is connected to the ADSL network, you need to enter the user ID and password provided by the ADSL carrier. The user ID and password may be entered by using the virtual keyboard.

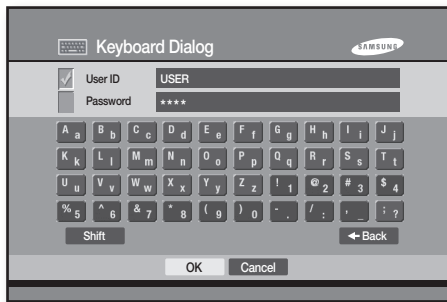

#### • Site IP

Sets the IP address for the main system to be connected to the network. If the connection mode is set to STATIC-IP, the user needs to enter the IP address directly.

If the connection mode is either DHCP or ADSL, the IP address provided by the DHCP server or ADSL carrier will be automatically displayed. If a DHCP or ADSL connection attempt fails, 000.000.000.000 will be displayed. In this case, turn off the power of the main system and wait for a while. And then, turn on the power and retry the connection.

#### • Subnet Mask

Sets the subnet mask address for the main system.

#### • Gateway

Sets the gateway address for the main system.


#### • Port(TCP)

The port number is selectable from 554 to 2048.

#### • Bandwidth

Set the maximum speed of transferring video data over a network.

## Web Viewer Port Settings

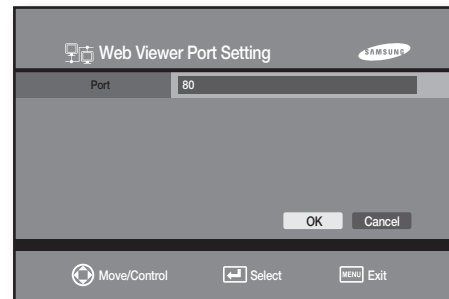

Set the number of a port where Web Viewer will be used on the Web browser. The port number is set to 80 by default.

#### • Port


Set the number of a port where Web Viewer will be used on the Web browser. You can set the port number to 80 to 60080. (The port number is set to 80 by default.)



- If the port for Web Viewer in the DVR is closed by the firewall or sharing equipment, Web Viewer cannot run on the Web browser. In this case, contact the network administrator.



## Network Status

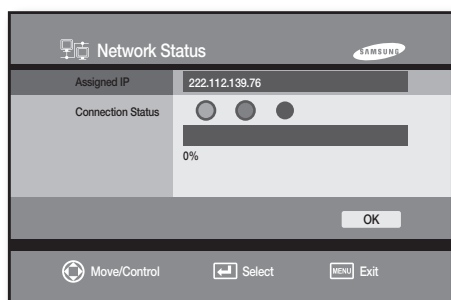

- **Assigned IP**

Displays the IP address assigned to the current system.


- **Connection Status**

Displays in colors whether the system is currently connected to the network in a normal state or in an abnormal state.

If **“OK”** is displayed, it means that the IP can be connected. If **“Failed”** is displayed, it means that the IP cannot be connected.

Color	Ping Response Speed
Green	Less than 500 ms
Yellow	500~2000 ms
Red	Greater than 2000 ms

## DDNS Setup

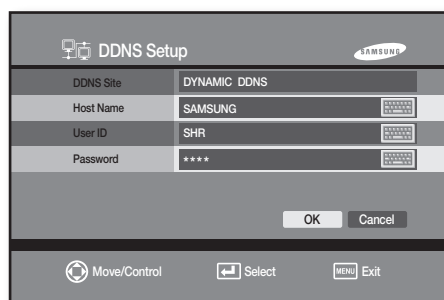

DDNS Setup function allows you to use the dynamic IP address connected to the system as if it is a fixed IP address.

- **DDNS Site**

The DDNS site is selectable among SAMSUNG, DYNAMIC DDNS, NO IP and CHANGE IP. When SAMSUNG is selected, The IP will be registered to the DDNS being operated by Samsung Electronics. DYNAMIC DDNS, NO IP and CHANGE IP are the public DDNS websites that allow registering a dynamic IP and assigning a URL free of charge. Set the host name, user ID and password after joining in the corresponding website and registering the URL.

- **Host Name**

Sets the host name of the DDNS site.

- **User ID**

Sets the user ID entered when joining in the DDNS site.


- **Password**

Sets the password entered when joining in the DDNS site.



- If you have set a public DDNS (dyndns.com, no-ip.com or changeip.com), it may take 30 to 60 seconds until the IP address of the host name (URL) can be updated in the DNS.
- When using the network by connecting an IP router to the main system, the network port has to be designated from the setup menu of the IP router. The main system uses 1494ports (554-2048) for the TCP communication. When using it by assigning IP addresses dynamically to the main system while using the DHCP function supported by the IP router, the port number for the IP address dynamically assigned from the setup menu of the IP router needs to be designated. When using an IP router, it is recommended to designate the IP address and port number to be assigned to the main system from the setup menu of the IP router, to set a fixed IP address for the connection mode of the main system, and to enter the IP address designated to the IP router. Please refer to the IP router manual or contact the manufacturer for the IP router setup method.

## NTP Setup

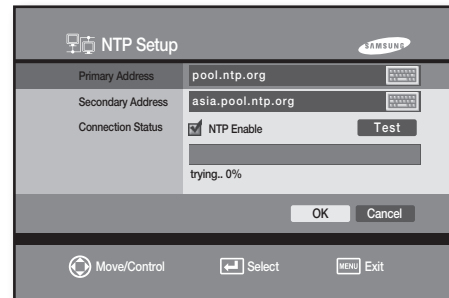

### • Primary Address & Secondary Address

Sets the NTP server address.

### • Connection Status

You can check the connection status with the NTP server by pressing "Test" after entering the NTP server address.

If the message "**Success**" is displayed, the NTP server is in the state possible to communicate; if the message "**Failed**" is displayed, it is not possible to communicate.

### • NTP Enable

When using the NTP function, please check the "**NTP Enable**" box.




- When the DVR system time prior to operating the NTP setup function is set faster than the NTP standard time (in other words, the DVR system time is set to a past time through the NTP setup), the recording function will not operate for the protection of previously recorded data. The recording function will operate normally from the point that the newly set time exceeds the original time value.
- When the NTP function is in use, a time change can not be made from the time setup menu and it only allows setting the standard time zone.
- The synchronization between NTP server and DVR system will be performed every hour.

## NTP(Network Time Protocol) Server List

ISO	Area	NTP Server Address
Worldwide		pool.ntp.org
Asia		Asia.pool.ntp.org
Europe		Europe.pool.ntp.org
North America		North-america.pool.ntp.org
Oceania		Oceania.pool.ntp.org
South America		South-america.pool.ntp.org
AT	Austria	at.pool.ntp.org
AU	Australia	au.pool.ntp.org
BE	Belgium	be.pool.ntp.org
CA	Canada	ca.pool.ntp.org
CH	Switzerland	ch.pool.ntp.org
CL	Chile	cl.pool.ntp.org
DE	Germany	de.pool.ntp.org
DK	Denmark	dk.pool.ntp.org
ES	Spain	es.pool.ntp.org
FI	Finland	fi.pool.ntp.org
FR	France	fr.pool.ntp.org
GT	Guatemala	gt.pool.ntp.org
IE	Ireland	ie.pool.ntp.org
IT	Italy	it.pool.ntp.org
JP	Japan	jp.pool.ntp.org
MX	Mexico	mx.pool.ntp.org
MY	Malaysia	my.pool.ntp.org
NL	Netherlands	nl.pool.ntp.org
NO	Norway	no.pool.ntp.org
NZ	New Zealand	nz.pool.ntp.org
PH	Philippines	ph.pool.ntp.org
PL	Poland	pl.pool.ntp.org
PT	Portugal	pt.pool.ntp.org
RU	Russia	ru.pool.ntp.org
SE	Sweden	se.pool.ntp.org
US	USA	us.pool.ntp.org

## Callback Settings

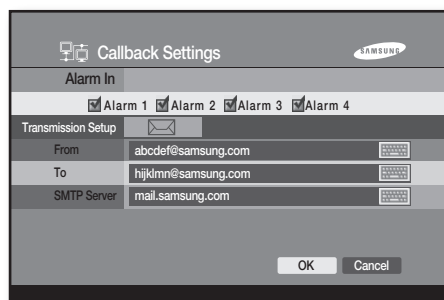


If an event occurs in ALARM IN where a callback alarm is set, callback messages as well as the camera images that inter-work with alarm input will be delivered to the e-mail address. Information on the sender, recipient, and STMP Server should be set to send a callback message to the e-mail address.

### • ALARM IN

Select the alarm input number where the callback function will be enabled.


### • From(Sender)

Enter the account of the e-mail sender. Press the **Enter** (↵) button. Then, the text box will appear as shown in the figure below:

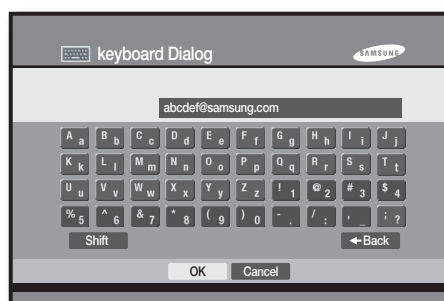


### • To(Recipient)

Enter the account of the user who will receive e-mails. Press the **Enter** (↵) button. Then, the window below will appear. Press "New". Once a virtual keyboard window appears, enter the recipient address. Select an account from the Usable Address Book and press the ► button to register the recipient address into the selection list.

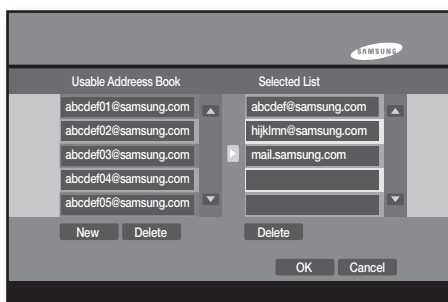

#### • SMTP Server:

Enter the information on SMTP Server. Press the **Enter** (**↵**) button. Then, the window below will appear:

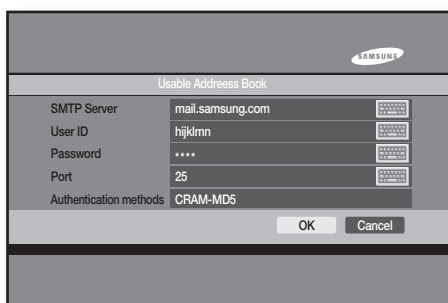

#### • STMP Server:

Enter the address of the server to which you will send e-mails.

#### • User ID:

Enter the user account of the mail server (SMTP).

#### • Password:

Enter the password for the user account in the mail server.

#### • Port:

Enter the port number for the mail server (SMTP). You can set the port number to 1 to 65535.

#### • Authentication Method:

Perform security authentication to enable logging into the mail server (SMTP). This option allows you to encrypt and authenticate IDs and passwords while sending or receiving e-mails. This option is mainly used to be registered into the services of Internet Service Providers (ISPs)/Internet content providers.



#### Authentication Method

##### • CRAM-MD5/CRAM-SHA1 Authentication:

Enables decipher when IDs or passwords are sent or received.


##### • PLAIN Authentication:

Uses the text format to send or receive IDs or passwords.

##### • LOGIN Authentication:

Encrypts IDs and passwords under Base64 in order to prevent packet sniffing.

## Transfer Picture Setup

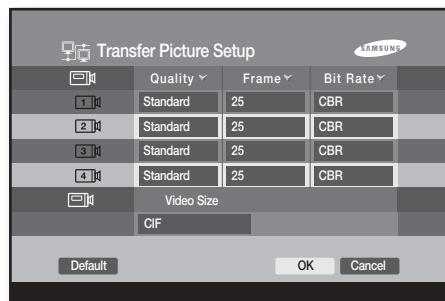

Set the video information to be sent over the network.

#### • Quality

Sets the image quality to be transmitted.  
Sets to any of Very High, High, Standard, Low.

#### • Frame

Sets the number of frames for recording. The number of frames indicates the number of screens recorded per second.

#### • Bit Rate

When transmitting a video over the network, select an appropriate bit rate according to the network bandwidth.

**Constant Bit Rate (CBR):** The transmission speed will be constantly maintained because the frame size will be fixed regardless of the changed volume of the video. However, the image quality may not be guaranteed.

**Variable Bit Rate (VBR):** Although it guarantees the image quality by appropriately distributing the bit rate regardless of the changed volume of the video, the network speed can slow down due to an increase in the frame size.

#### • Video Size

Sets the screen size for recording.


Video Source	Full D1	Half D1	CIF
NTSC	704 X 480	704 X 240	352 X 240
PAL	704 X 576	704 X 288	352 X 288

If you press "Default", the property values return the initial values.

# PTZ camera control


## PTZ CAMERA CONTROL MODE

In order to enter into the PTZ device control mode, the PTZ device setup values must be properly set.

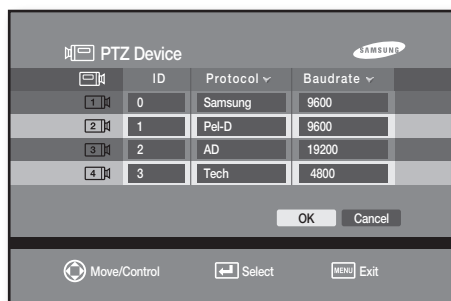

If PTZ has been set from the menu, the PTZ icon (PTZ) is displayed on the corresponding channel of the screen.

A blue bar appears on the monitor screen if you press the **Enter** (Enter) button in the live mode screen. Move to the channel with the PTZ icon by moving this bar using the direction buttons and enter the PTZ device control mode by pressing the **PTZ** button. If you enter the PTZ control mode, the PTZ icon of the live screen will be changed from the white color to the yellow color. Only the basic operations of Pan, Tile and Zoom can be performed in the PTZ device control mode of the split screen.

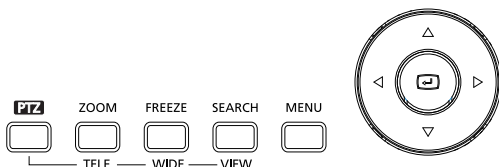

From the single screen, you can control the basic Pan, Tilt or Zoom operations, preset, camera menu and other functions. From the menu, first select the channel set with PTZ by pressing the **CH1** to **CH4** buttons on the front panel and press the **PTZ** button. If you enter the single screen PTZ device control mode, the PTZ icon of the screen is changed from the white color to the yellow color.

Press the **PTZ** button in the live mode to cancel the PTZ device control mode.

If it is cancelled, the PTZ icon (PTZ) is changed from the yellow color to the white color.




- If no PTZ control is used by the DVR for as long as 5 minutes, the PTZ mode is automatically cancelled. It is intended to have the PTZ control from a remote viewer during the time of no PTZ control.

## BASIC OPERATION OF PAN, TILT & ZOOM


### • PAN

The PTZ camera can be controlled in the horizontal direction by using the **direction** (◀ or ▶) buttons on the front panel within the PTZ device control mode.

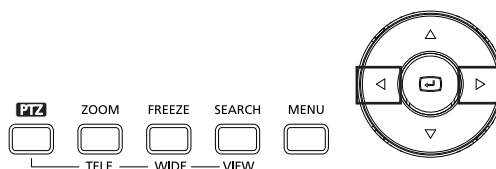


### • TILT

The PTZ camera can be controlled in the vertical direction by using the **direction** (▲ or ▼) buttons on the front panel in the PTZ device control mode.

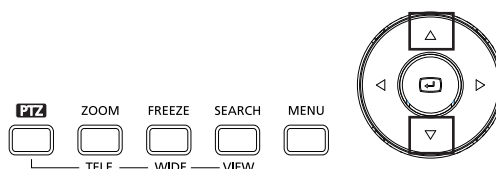


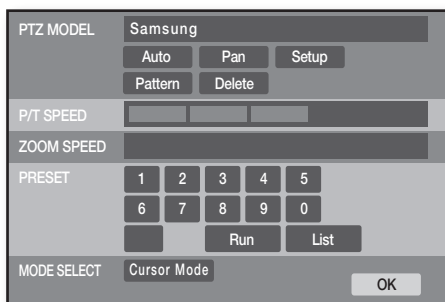
## • ZOOM

The PTZ camera can perform the enlargement/reduction function by using the **TELE/WIDE** button on the front panel in the PTZ device control mode.

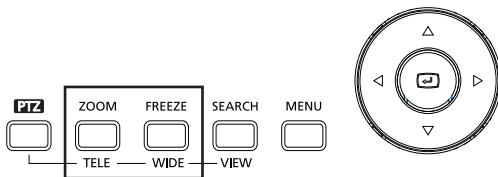

## PTZ DEVICE MENU SETUP

In order to enter the PTZ device menu setup mode, first select the channel set with PTZ by pressing the **CH1** to **CH4** buttons on the front panel and press the **PTZ** button. If you enter the single screen PTZ device control mode, the PTZ icon of the screen is changed from the white color to the yellow color. At this time, the PTZ menu setup window appears if the Search() button is pressed.



## • PTZ MODEL

Displays the currently set PTZ model.

The function menus shown by the PTZ model are displayed. Each menu allows you to set various PTZ functions.

**Auto:** This traverses a designated location sequentially from the PRESET 1 to 20.



**Pan:** If you press "Pan" after setting the positions of two points 'Start' and 'End' from the internal menu of the PTZ camera, this function makes it to come and go repeatedly between two points. The Pan function can be cancelled by pressing "Pan" again.

**Setup:** Select it either to designate an arbitrary location to the PRESET number or to enter the internal menu screen of the PTZ camera.



**Pattern:** This function remembers manual operations such as PAN, TILT, ZOOM, and FOCUS and plays back as it remembers.

**Delete:** This function allows you to delete information on the location of PTZ, which is set to PRESET No. 1 to PRESET No. 20 once you press "Delete" while pressing "Setup".

## • P/T SPEED

You can set the Pan/Tilt speed of the PTZ camera in step-by-step fashion. After moving the cursor to the **P/T SPEED**, press the **Enter**() button and set the speed using the **▲** or **▼** button. Escape from the change mode by pressing the **Enter**() button again.

## • ZOOM SPEED

You can set the zoom speed of the PTZ camera in step-by-step fashion. After moving the cursor to the **ZOOM SPEED**, press the **Enter**() button and set the speed using the **▲** or **▼** button. Escape from the change mode by pressing the **Enter**() button again.

## • MODE SELECT

It is used when designating a certain position of the PTZ camera to the PRESET ID or controlling the position of the PTZ camera. By toggling the button, it is switched to "Cursor Mode" → "P/T Mode", "P/T Mode" → "Cursor Mode".


**Cursor Mode:** This shows the state that can move between menus.


**P/T Mode:** This shows the state that can control the Pan, Tilt and Zoom function of the PTZ camera.


## PRESET SETUP

This is the function that saves a desired position of the PTZ camera.





It allows storing up to 20 PTZ camera positions.

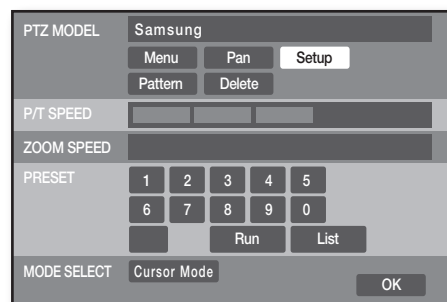
If the Search() button is pressed from the single screen PTZ device control mode, the PTZ menu setup window appears.




Press the **Enter**() button to set the PRESET after moving the cursor on the “**Setup**”.

If the mode is changed to the “**P/T Mode**” by pressing the “**Cursor Mode**”, it will be switched into the PTZ position manipulation mode.

Move the PTZ camera to a desired position by using the **direction** () buttons and **TELE/WIDE** button on the front panel.

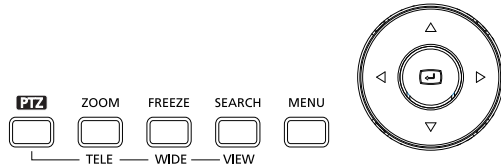


You can escape from the PTZ position manipulation mode if you switch to the “**Cursor Mode**” by pressing “**P/T Mode**”.


Enter a PRESET number to remember the current location of PTZ into the PRESET number. Then, press the **Enter**() button. (PRESET numbers can be set to 1 to 20.)

You can escape from the PRESET setup mode by pressing the “**Setup**” again.

## PRESET NAME SETTINGS

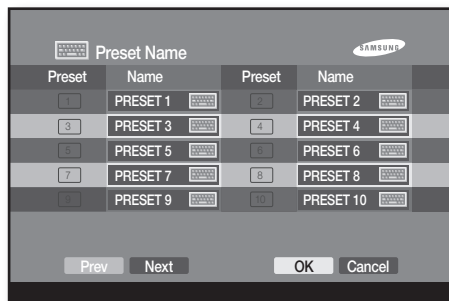

You can set the name of each PRESET.

Press the **Enter**() button. Then, a virtual keyboard will appear. Move the cursor to select letters. You can enter up to 10 letters. Press “**Shift**” to change lowercase and numbers to uppercase and special keys respectively.



Press “**Prev**” to display from PRESET 1 to PRESET 10 and press “**Next**” to display from PRESET 11 to PRESET 20.

## CAMERA MENU SETUP


If you press the **SEARCH**() button in the single screen PTZ device control mode, the PTZ menu setup window appears.

If you press “**Menu**” after pressing the “**Setup**”, the menu screen provided by the PTZ camera is displayed. Through this menu, you can set various functions of the PTZ camera.



You can move to the built-in PTZ menu or set the value by using the **direction** () buttons on the front panel.

Press the **MENU** button on the front panel to exit from the built-in camera menu.

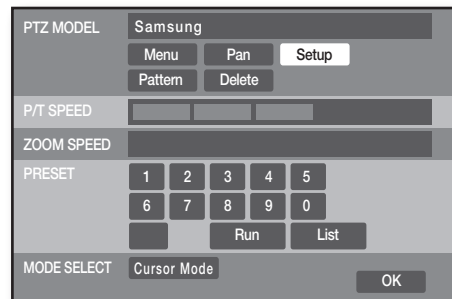

# recording


## REC(NORMAL RECORDING)

All video image from the channels never recorded will be recorded by pressing the REC button. At this time, the REC LED lights and the record icon appears on the screen. The HDD LED on the front panel blinks while data are saved on the HDD.

- If the job (such as time change, file deletion, HDD format, or HDD connect/release) needing to stop recording is executed, the current recording job is halted.

## RECORD SCHEDULE

The scheduled recording job will be automatically executed while the “**Recording Schedule**” function is selected from the recording schedule menu. If the recording schedule function is not set, recording will not be done during the time. The recording icon appears during the scheduled recording time. The HDD LED on the front panel blinks while data are saved on the HDD.

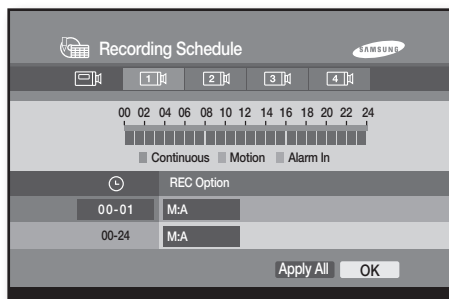

When an event occurs during the time that an event recording is set, the automatic recording function is performed. In this case, the event recording setup of the corresponding channel will be saved within the event recording mode setup sub-item (Quality, Frame, Pre Event, Post Event, Video Size) of the event recording menu item.



- The event recording function is performed only if the event recording function is set from the recording schedule setup menu. If the job (such as time change, file deletion, HDD format, or HDD connect/release) needing to stop recording is executed, the current recording job is halted.

## EVENT RECORDING

### • Alarm Detection

The Alarm In (sensor) operation mode has to be set to **N.O** (Normally Open) or **N.C** (Normally Close) from the alarm section of the event recording menu.

### • Motion Detection

The motion detection region of the event recording menu has to be set.

### • Event Record

It sets the form saved when an event has occurred.




- If the job (such as time change, file deletion, HDD format, or HDD connect/release) needing to stop recording is executed, the current recording job is halted.



# search and play

## USER LOGIN


Press the **SEARCH** button in order to enter the search screen.

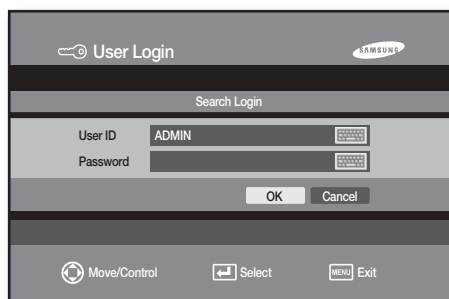

In order to perform a search, the user with a relevant search right has to be logged on. You may log on as a relevant user by entering the user ID and password. (When this product is shipped, the password of the 'ADMIN' user account will be set to '4321'.)


## SEARCH SCREEN


The details of the search screen are as follows:

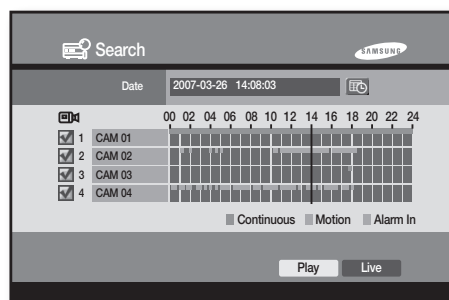


## SEARCH DATE & TIME SELECTION



You can move to the recorded date by using the calendar.

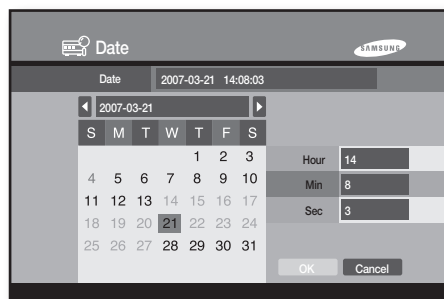
If you press the  icon to select the desired date for search, the calendar window appears.



: Moves to the previous month.

: Moves to the following month.


When setting the search time, move the cursor to the Hour, Min and Sec items and press the **Enter** () button. Then, change the hour/minute/second by using the **▲** or **▼** button. Escape from the change mode by pressing the **Enter** () button again.

The date recorded with a video data is shown in orange. If you press the **Enter** () button after moving the cursor on the date to be searched, the search date is selected.


If you press "OK" after selecting a search date, the screen returns the previous screen.

Date Color	Description
Orange	Date that a video data was recorded
Blue	Date that a video data was not recorded
Green	Date that a search date was selected
Red	Date for the holidays

# SEARCH CHANNEL SELECTION & RECORDING GRAPH

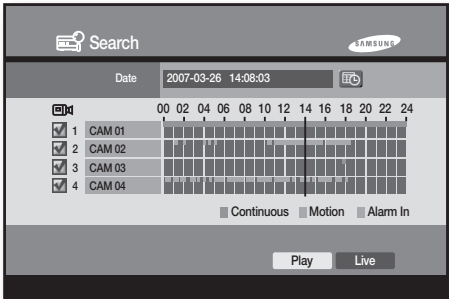

## Channel Selection

You can select the channel to be searched. After pressing the **CH1** to **CH4** buttons on the front panel or moving the cursor to the channel to be searched, the channel can be selected by pressing the **Enter**() button.

## Recording Graph

The recording amount of each channel is shown on the Timeline graph.

The search time can be set by moving the timeline bar to the left or right.

(/(): Moves the timeline bar to the left.

(/(): Moves the timeline bar to the right.


Graph Color	Description
Green	Continuous Recording
Orange	Motion Recording
Blue	Alarm In Recording

# PLAYBACK

If you press “**Play**” after selecting the channel and date to be searched, the video is played.




During Live mode instant playback can be started by pressing the **Play/Pause** () button. Once pressed the DVR will instantly playback recorded data 2 minutes prior to the button activation.



In order to stop playing, press the **Stop** button() . And if the data position reaches to the end, the play stops and it becomes the pause state.

In order to return to the search screen while playing a video, press the **SEARCH** button.



- Because the system does not play a video in the menu state even after the **Play/Pause** button () is pressed, you need to exit from the menu first to play the video.

## Fast Play

If you press the left or right button (/() while in playing, you can see the screen in the reverse or forward direction with the 2-times speed, 4-times speed, 8-times speed, 16-times speed or 32-times speed.


- **Viewing One Scene at a Time**

If you press the left or right button (◀/▶) while the screen is paused, you can see still images forwardly or reversely. During reverse search, the interval between cuts may vary depending on the recording specification.

- **Audio On/Off**

You can turn On/Off the play channel audio by pressing the **AUDIO** button from the play screen.

- **Play Screen Mode**

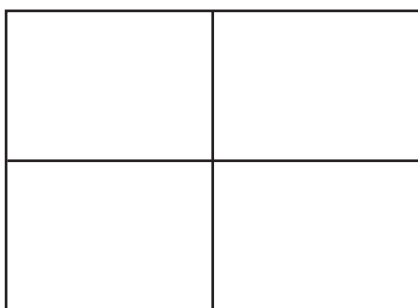

**4 Split Screen:**


If you select two or more channels from the search screen, the 4 split screen appears.



**Single Screen:**

Only single screen can be selected when a single channel is chosen in the search menu.

If multiple channels are selected in the search menu than the use select between channels in single screen mode using to **CH1** ~ **CH4** buttons.

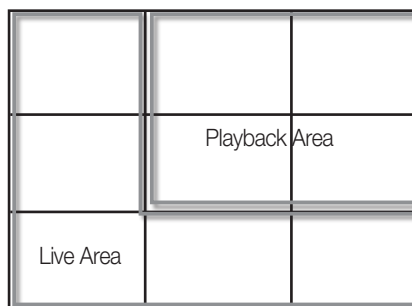


**9 Split Screen:**

If the **MODE** button is pressed from the 4 split screen, the 9 split screen appears. The 4 channels being played are displayed on the upper right end of the screen and the live 4 channels are displayed on the lower left end of the screen.

# appendix

## Net I

### Net I Setup tool

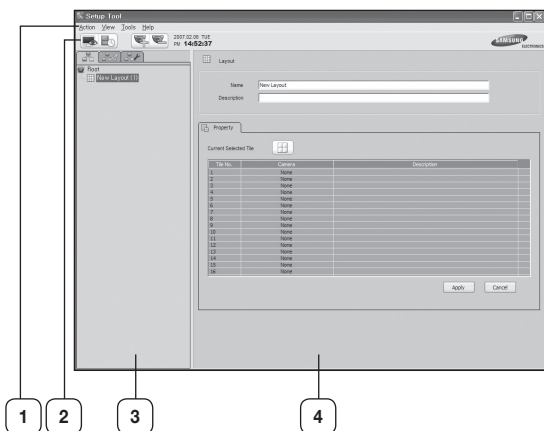

The Setup Tool screen consists of four separate areas:

1. **MENU** area:  
You can see and perform the Setup-related functions.
2. **TOOLBAR** area:  
You can directly perform any of Live Viewer and Search Viewer applications by clicking the icon. Click the icon with the PLUS sign to add a new device. To delete an existing device, click the icon with the MINUS sign.
3. **VIEW TREE** area:  
You can see and configure the view trees such as Logical View Tree, Physical View Tree, and System View Tree.
4. **CONFIGURATION** area:  
You can define the name, description, and the related settings of each entity, and see the settings.

#### To manually register a device

1. Select **Action > Create > Device > Add Device**, or right-click in the VIEW TREE area and select **Create > Device**. You can also use the **Add Device** button (🛠️) in the TOOLBAR area and select **Device(Manual)**.
2. Set the values for vendor name, model name, and address type.
3. According to the model name or address type value, the displayed items are different.

- When the address type is Static IP

- When the address type is URL

- When the address type is Samsung DDNS

- When the address type is S1 DDNS

The 'Add Device' dialog box shows the following configuration for S1 DDNS:

- Vendor Name: Samsung
- Model Name: SCC-C6475
- Address Type: S1 DDNS
- HTTP Port: 553
- MAC Address: 50 50 10 20 50 50
- User ID: danny
- Password: \*\*\*\*\*
- Buttons: Register, Cancel

- When a DVR is selected

The 'Add Device' dialog box shows the following configuration for a DVR:

- Vendor Name: Samsung
- Model Name: SHR-4160
- Address Type: Static IP
- IP Address: 201 . 203 . 176 . 10
- Device Port: 554
- User ID: danny
- Password: \*\*\*\*\*
- Buttons: Register, Cancel

4. Input the values for each address type.
5. Enter the user ID and password and click **Register**.



- If **Cancel** is selected, the values return to the original settings.
- When the MAC address needs to be input depending on the firmware version, the MAC address is required to be input.

When the configuration completes, the registered device is displayed on the physical view tree. If any registration problem occurs, it is displayed on the reply message box. The possible errors are like the following:

Reply message	Comments
Unused Device	It is a unknown device.
Parameter Error	The registered parameters are wrong.
Disconnected	The device is disconnected.
Not Connected	The device is not listed on the network.
Network Error	The network is not in good status.
Wrong Address	The device has a wrong address.
Wrong User ID	The input user ID is wrong.
Wrong Password	The input password is wrong.
Log-In Fail	The log-on operation has failed.
Access Conflicted	Access conflict has happened.
Exceed the Fixed Number of People	Accessed users are out of limit.
Authority Error	User authorization has failed.
Can't Receive Device's Response	The system cannot receive responses from the device.
MAC Address Conflicted	Duplicate MAC addresses exist.
IP Address Conflicted	Duplicate IPs exist.
Unknown Error	A unknown error has occurred.

It is set on the physical view tree. You can see and modify the registered device.

Device configuration window showing fields for Name, Description, Vendor Name, Model Name, Address Type, IP Address, Device Port, HTTP Port, User ID, and Password. The 'Information' tab is selected.

**To modify the registered device**

1. Select **View > Physical**, or click the second icon tab on the VIEW TREE area.
2. Select the device you want to modify and click **Modify**.
3. Modify the values for items and click **Modify**. (Vendor Name, Model Name and MAC Address are not available to modify).


✎ • If Cancel is selected, the values return to the previous settings.

Modify Device dialog box showing fields for Vendor Name, Model Name, Address Type, IP Address, HTTP Port, Device Port, User ID, and Password. The 'Modify' button is highlighted.

**Viewing the device-related settings**

The device-related settings can be accessed by selecting **Show Device Page** after right-clicking on a device in the VIEW TREE area.

The device-related settings that have been configured in each device site are displayed here. For furthermore information, refer to each device manual.

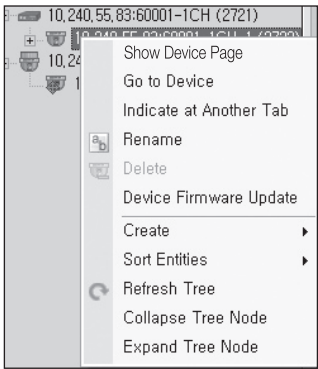

**Net I Live Viewer**



The Live Viewer screen consists of six separate areas:

1. **MENU** area:  
You can see and perform the functions in various menus.

## 2. **TOOLBAR** area:

You can directly execute several functions or applications.

When listed from left to right, the tools are Connect/Disconnect, Search Viewer, Setup Tool, Save Snapshot, Print Snapshot, Add a Bookmark, Remove the Selected Tile, Start Recording on All Tiles, Stop Recording on All Tiles, and Alarm Indicator.

## 3. **CAMERA TREE** area:

You can see the logical view tree, which displays the assigned cameras, layouts, and sites.

## 4. **CAMERA CONTROLS** area:

Using the controls, you can handle the videos displayed in the VIEWING area.

## 5. **VIEWING** area:

Through the tiles in a layout, you can monitor images from multiple cameras. A layout can permit up to 16 cameras simultaneously in this area. With a dualscreen configuration, you can view maximum 32 cameras. The screen aspect ratio of each tile follows the ratio of the original source.

## 6. **MESSAGE** area:

Events received from remote devices and system log messages are displayed in this areas.

But you can also enable or disable the display of four areas (CAMERA TREE, CAMERA CONTROLS, MESSAGE, TOOLBAR areas) using the options on View menu.

For instance, once the **Camera Tree Window** is unchecked, the CAMERA TREE area will disappear.

Using the **Full Screen** function, you can expand the application window size to full screen.




- Audio may become unstable depending on the bandwidth usage when transferring audio data over a network in Net I.

## Using layouts




The CAMERA TREE area displays the logical view tree, which contains the cameras, layouts, and sites that have been created through the Setup Tool application.

Each displayed entity shows a number next to the entity name. The number is used to separate tiles in the VIEWING area. When a tile is active, it is displayed in orange.

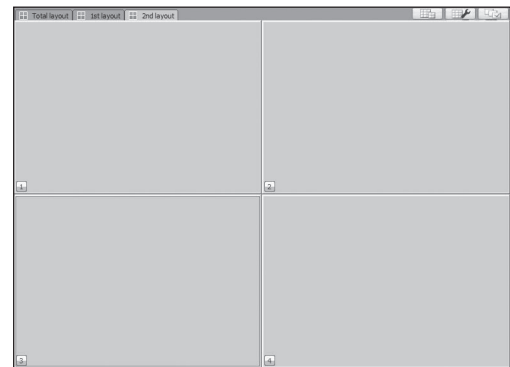


To place multiple layouts in the VIEWING area, doubleclick each layout in the CAMERA TREE area. Or you can drag the wanted layout in the CAMERA TREE area and drop it in the VIEWING area.

The created layouts have no predefined patterns. You have to assign patterns to each layout according to the assigned number of cameras and maps. The default layout pattern is given a 2 x 2 pattern.

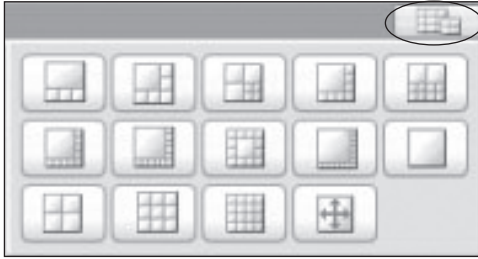

## Net I Search Viewer

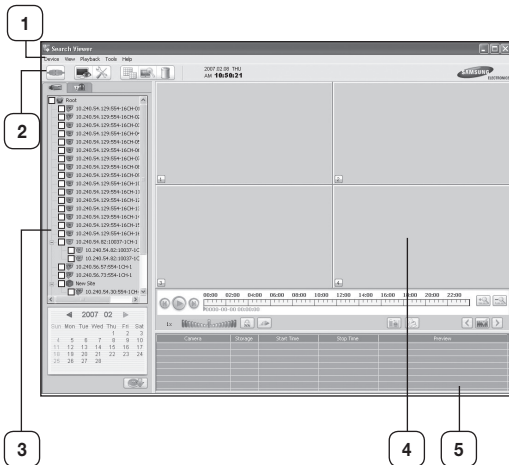

The Search Viewer screen consists of five separate areas:


- 1. MENU area:**  
You can see and perform the functions in various menus.
- 2. TOOLBAR area:**  
You can directly execute several functions or tools. When listed from left to right, the tools are Connect, Live Viewer, Setup Tool, Pattern, Digital Zoom, and Remove Selected.
- 3. QUERY GENERATOR area:**  
You can set the condition for query. It includes four different tabs such as Camera Search and Event Search.
- 4. VIEWING area:**  
You can monitor the videos recorded by multiple cameras. A layout can permit up to 16 cameras simultaneously in this area.
- 5. QUERY RESULT LIST and SYSTEM LOG area:**  
Queried results and system log are displayed here.



- For furthermore information, refer to Net I manual.

## Device Firmware Update

### To update device firmware

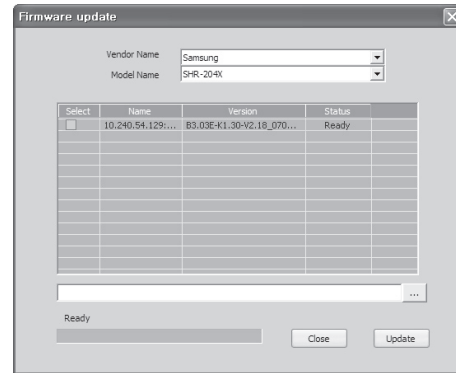

- Select **Action > Device Firmware Update**, or right-click in the **VIEW TREE** area and select **Device Firmware Update**.
- Device is displayed when you select the Vendor Name and the Model Name you want to update.
- Check the select box for updating the device.
- Click **FindFile** ( ) button and select Firmware file.
- To update the device, Click **Update**.




- When more than two devices is selected for updating, the update is executed in sequence. After the update is done, Status displays OK.
- While updating, the other functions are not available.




## Before use

### Setup menu buttons

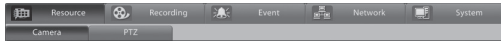

- By pressing buttons, you can select between each menu.
- The main categories : Resource, Recording, Event, Network, System


### Storage/Cancel of Changed Information

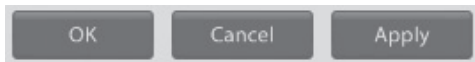

- **OK:** Close the windows and saves, any changed information.
- **Cancel:** Close the windows and not saving changed information.
- **Apply:** Dose not close the windows and saves the changed information.

### Virtual Keyboard




- Click  to operate Virtual Keyboard.
- Click buttons by mouse to input in information.



### Language Setting




- Click **Language Setting** to change language applied to the system.
- Select language which you want to change, and then Click **OK**.

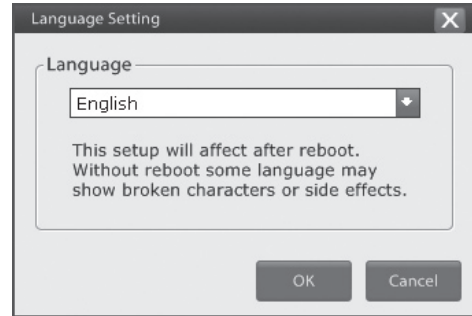

## RESOURCE

### Camera

You can set up brightness, contrast, hue, about each cameras. How you choose camera number select camera number in left side of server view.

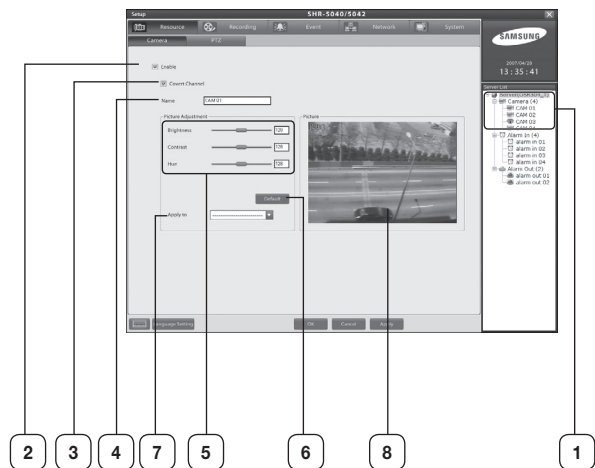

#### 1. Camera :

Select channel to setup camera.

#### 2. Enable:

setting camera enable or not.

#### 3. Covert Channel:

It is a function of camera picture hide. It is useful for user to conceal camera recording .



- When you watch a screen in remote area. A user who is authorized 'Covert Channel' can see a screen.

#### 4. Name:

Input the name of site which camera is installed.

#### 5. Brightness/Contrast/Hue :

Change the setting for the brightness, contrast, hue.

#### 6. Default:

Make initial setting of brightness, contrast, hue.

#### 7. Apply to:

To selected channel setting value can be applied to all or just selected channels.

#### 8. Picture:


It shows picture which you select.



- Please check adjustment of camera and monitor because Brightness/Contrast/Hue can not use for change a picture.

### PTZ

You can control PTZ or Speed dome which is connected DVR system or external device. To use this device, install RS485 to external device, then set up this device.

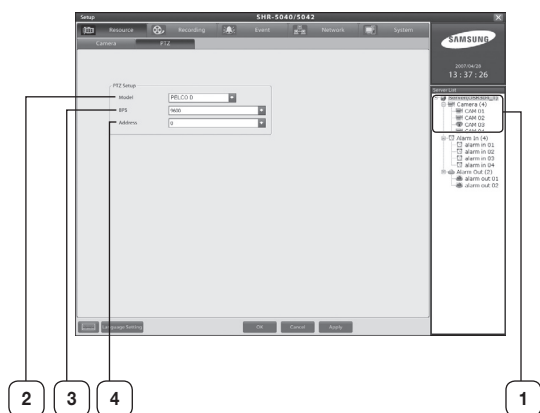

#### 1. Camera:

Displays the setup camera channel.

#### 2. Model:

Displays the setup PTZ or the model of the speed dome.

#### 3. BPS:

Displays the setup PTZ transferring speed.


#### 4. Address:

Displays the PTZ address.

## RECORDING

### Recording setup

Recording information (Recording Frame rate, Quality, Resolution, Event Record Frame rate) can be set up by time and by recording type.

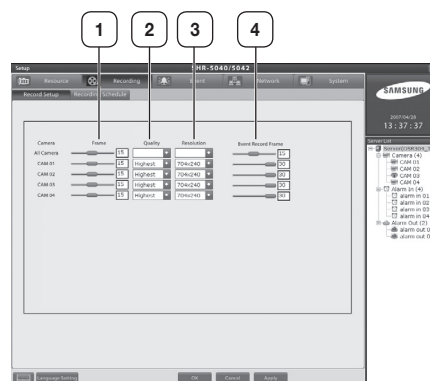

#### 1. Frame:

It can adjust frame number of normal recording.

#### 2. Quality:

It can adjust recording quality.

#### 3. Resolution:

It can adjust recording display size.

#### 4. Event Record Frame:


It can adjust the number of record frame when "Alarm In" or "Motion" happen.



- The normal record if frame rate should be set less or equal to the event recording frame rate.

## Recording Schedule

This function allows you to setup a recording schedule for the DVR by each camera per hour.

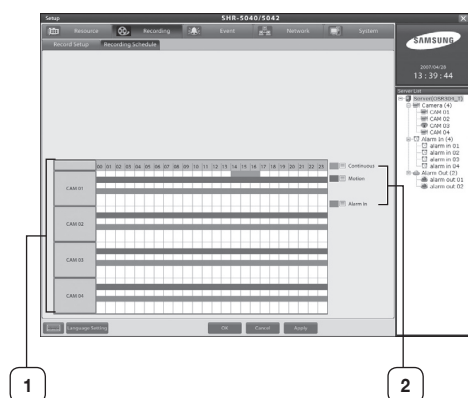

### 1. Schedule Timeline:

You can set a variety of recording mode on time of each cameras. After you select recording mode, designate scope by dragging mouse.

### 2. Recording Mode:

It shows a variety of recording type. Select recording type and drag it to schedule line.

**Continuous:** Records continuously.


**Motion:** Recording only when motion is detected on screen.

**Alarm In:** Recording only when Alarm In is activated.

## EVENT

### Motion Detection

This Motion Detection uses connected with recording, alarm, emergency when motion is detected.

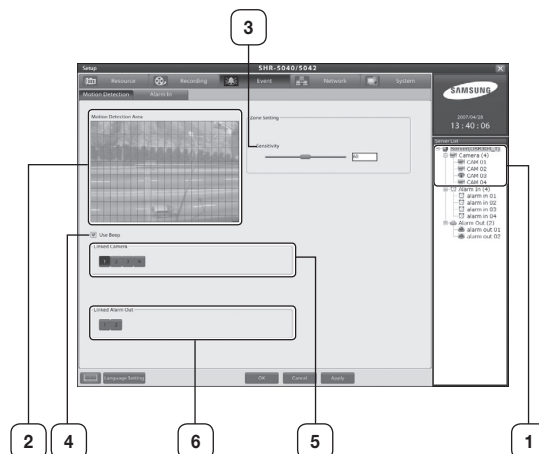

### 1. Camera:

Select channel to setup camera.

### 2. Motion Detection Area:

Designate scope of motion detection area to see movement of picture in camera. It will be marked green color.

**Motion detection scope designation:** Click mouse left button to designate the area of motion detection

**Motion detection scope cancellation:** Click mouse right button to cancel the area of motion detection .

### 3. Sensitivity:

it can set up detection level about motion detection area.

### 4. Use Beep:

It makes beep when movement is found in motion detection area .

### 5. Linked Camera:


Select camera which will connect with motion detection type camera. If motion detection type camera detect any movement, it will record with selected camera.

### 6. Linked Alarm Out:

Select alarm out to connect with camera which is set up motion detection.

## Alarm In

Alarm In recognize emergency in outer area and use with recording, alarm, PTZ control.

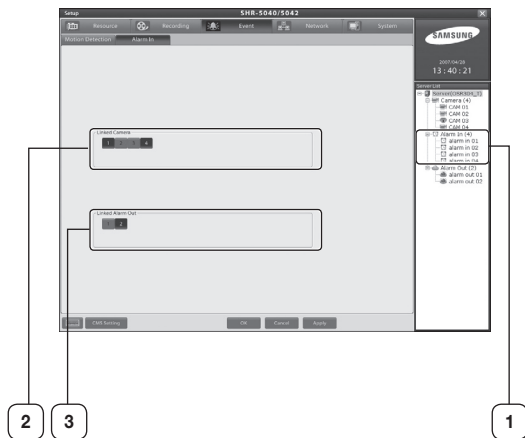

### 1. Alarm In:

Select channel to setup Alarm In.

### 2. Linked camera:

Select camera which is linked with Alarm In. It records connected camera together when event occurs.


### 3. Linked Alarm Out:

You can set up emergency sound make when alarm in make event.

## NETWORK

### Connection

This DVR displays the network component informations to provide video streaming function and remote control in network.

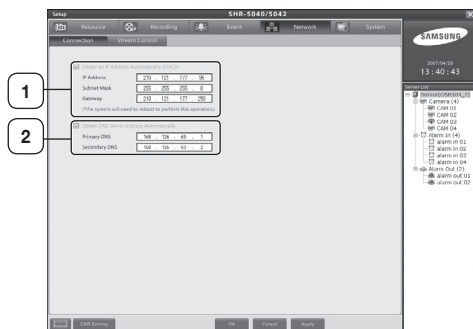

### 1. Obtain an IP Address Automatically (DHCP):

Dynamic address assignment is a type of receiving address from DHCP. DVR which receive address automatically from DHCP server displays network address in system.

### 2. Obtain DNS Server Address Automatically:


Displays IP address to main DNS server and assistant DNS server.



- Please contact network administrator or internet service provider if you don't know ip address or network structure.

### Stream Control

Set the network stream control for all cameras by frame rate, resolution and quality.

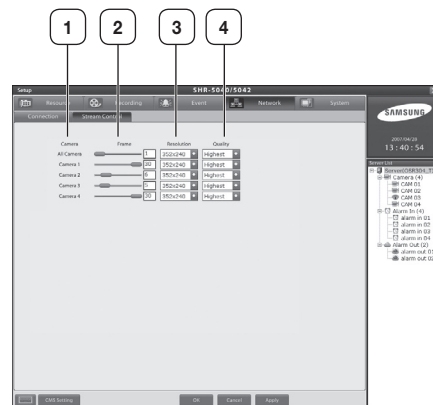

### 1. Camera:

It shows each camera number.

### 2. Frame:

Control the frame rate which is transferred by each camera across the network.

### 3. Resolution:

Set the resolution size to be transferred by each camera across the network.


### 4. Quality:

Set the quality of picture to be transferred by each camera across the network.

## SYSTEM

### Date/Time

Displays the current date and time of the DVR system. Select Date/time set up and save current date and time by NTP server.

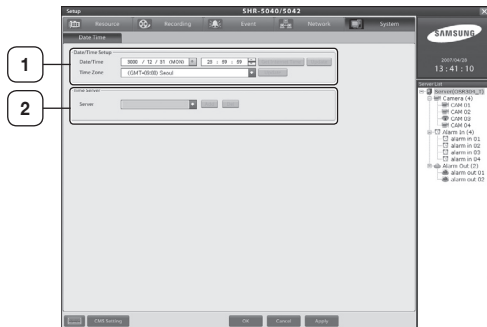

#### 1. Date/Time Setup:

You can set up current date and time by use of .

##### Date/Time:

You can select current time by hands or get current time from NTP server.

And you can adjust current time which received from NTP server to system.

Click **Get Internet Time** button to receive current time, and click **Update** button to adjust system.

**Time Zone:** After you select current time, click

**Update** button.


#### 2. Time Server:

Input address of server "NTP (Network Time Server)" At first. Input NPT server address and click **Add** button, then NTP server will be added. If you want to delete NTP address, select NTP server will be deleted, then click **Del** button.


## SDB VIEWER

### Running SDB Viewer


Save the backup media in the format of SDB on the PC where the Viewer application will run. Double-click the 'SDBViewer' folder.

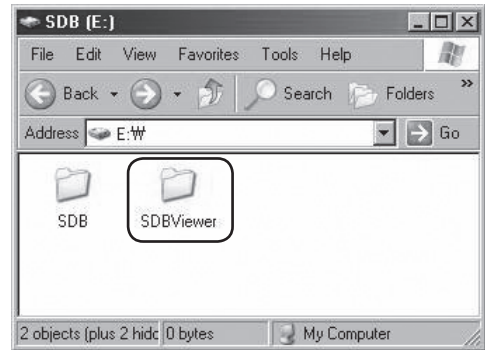

Double-click 'viewer.exe' to run the Viewer application.

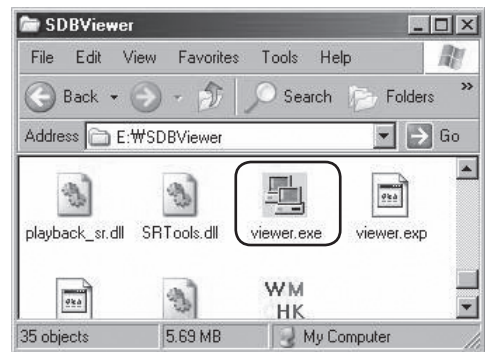

## Main Window of SDB Viewer

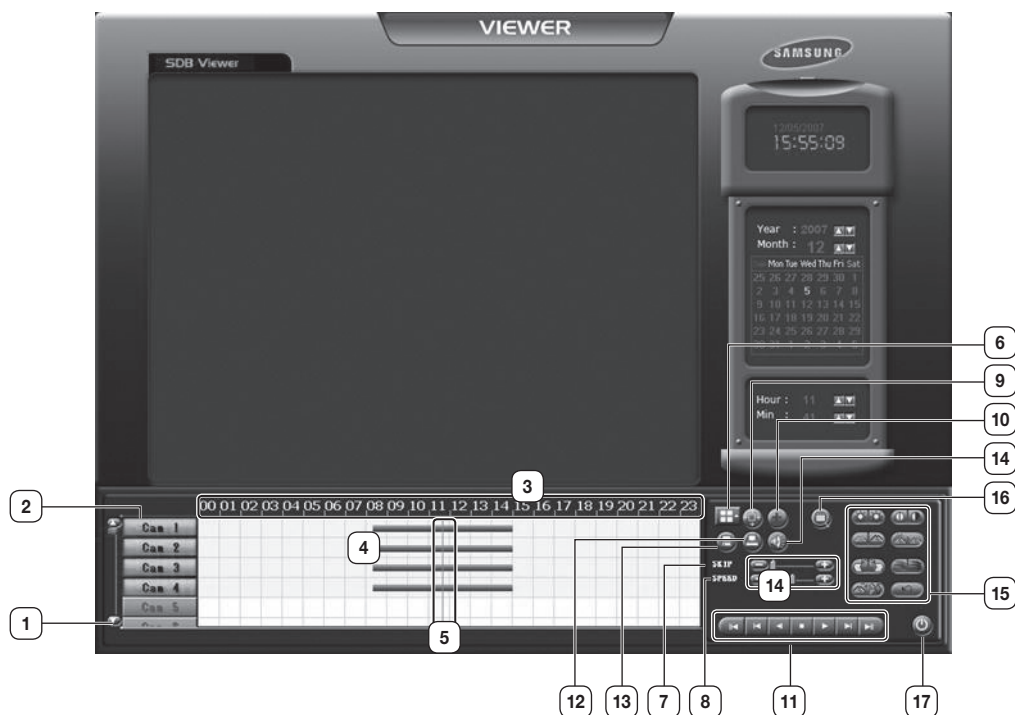

### 1 Scrolling Camera Buttons

This function allows you to scroll up or down the button for the camera to be searched.

### 2 Camera

Select the number of the camera to be searched.  
Once you click the number, the colors of the button and camera number will change.

### 3 Zooming out Time Display and Graphs

Displays the time of the data storage.  
Click the time to check the graphs in detail by zooming out the hour interval in three steps.


### 4 Display of Storage Amount

This function enables recording types and storage amount by hour to be displayed in graphs.  
If data are saved in continuous recording, graphs will be displayed in maroon.  
If data are saved in motion recording, graphs will be displayed in blue.  
If data are saved in sensor recording, graphs will be displayed in orange. If data are saved in a pre-alarm, graphs will be displayed in green. If not, any graph will not be displayed.

### 5 Search Bar

This function enables the time zone of the data being searched to be displayed.  
Move the search bar to the left or right to search the saved data in the desired time zone.

### 6 Split Window Setup

If you click , the Split button will be displayed. The split mode of the search window automatically changes and the 4/9/16 split window is played back depending on the number of selected cameras.

### 7 SKIP

The searched images are displayed on the monitor as many as the setting.  
The setting value is not the number of images shown on the window but an internal differential value of the SDB Viewer program.

### 8 SPEED

This is a time delayed to display a searched image on the monitor.

**9 Zoom (🔍):**

This function enables saved images to be zoomed out or in. It supports zooming out images in five steps.

**Digital Zoom**

Click the Digital Zoom button sequentially to switch to [Zoom out/Zoom in/Transfer].

**10 Zoom Out (🔍):**

Right-click a part of the image to zoom out the image step by step centering on the part. This function supports zooming out images in 13 steps.

**Zoom in (🔍):**

Right-click a part of the zoomed-out image to zoom in the image step by step centering on the part.

**Move (👉):**

Right-click and drag a part of the zoomed-out image to view another part of the zoomed-out image.

**11 Playing back Search Window**

Set the camera number and time and date to be searched before playing back the search window.

Adjust search speed by using the values of SKIP and DELAY to play back the search window efficiently.

- ⏮ : Moves to the first data on the selected date.
- ⏪ : Plays back each window in the reverse direction.
- ⏩ : Plays back in the reverse direction
- ⏹ : Stops
- ⏭ : Plays back in the forward direction.
- ⏮ : Plays back each window in the forward direction.
- ⏭ : Moves to the last data on the selected date.

**12 Backup (💾):**


Select and zoom out the desired image while searching saved data from the search window and click 💾. Then, the 'Backup' window will appear.

**13 Print (🖨):**

Click 🖨 button to print out the searched image. Printing cannot be performed until one window is zoomed out during search.

**14 Voice Playback Setting**

Zoom out and select an image of the camera where audio is saved in search mode to play back voice as well as images. (Voice is not played back on the multi-channel search mode window.)

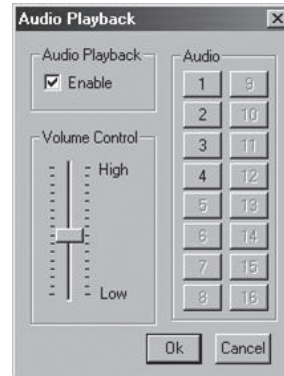

Click 🔍 button in search mode.

Then, the "Audio Playback" window will appear as shown in the figure below.

Unselect the 'Enable' checkbox ☐ from the 'Audio Playback' option to disable audio playback. Select the 'Enable' checkbox ☒ to enable audio playback.

Drag the volume slider upward to turn up the audio, or drag the volume slider downward to turn down the audio.


**15 Improving the Image Quality of the Search Window:**

You can improve the quality of a selected image during search.

**16 Search Sheet**

Click the 🔍 button to search the backup data. Then, the window will appear as shown in the figure below:

Select the name of the backup model. Then, select the backup data you want to search from the list and click the 'Search' button.

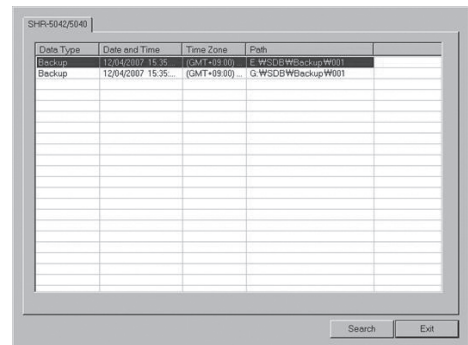**17 Exit**


This button allows you to exit the dedicated viewer program.



## SFX PLAYER

### SFX Player Execution

This feature moves SFX backup files to the designated SFX storage folder after the system is connected to your PC. The SFX format files are named with the '.exe' extension as shown below.

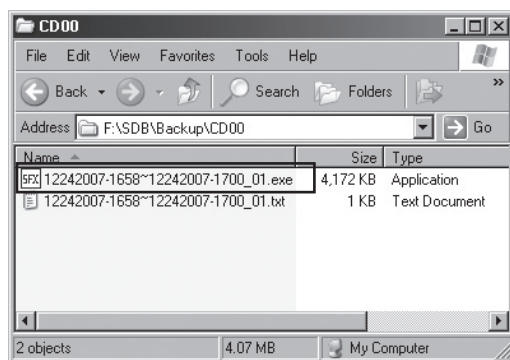

Double-click an execution file (.exe file) and the video player plays back the backup data.




- If you use the SFX Player, a backup data file and a video player are saved in the same execution file. When the execution files are used, you don't need additional video player for playback.

## WEB VIEWER

### INTRODUCING Web Viewer

#### WHAT IS Web Viewer?

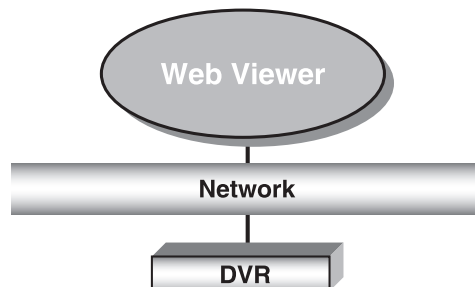

Web Viewer allows remote access to your DVRs. You have access to live video, archived video, PTZ control (if configured), etc.

#### PRODUCT FEATURES

- Remote access from a standard browser
- Supports PTZ camera controls
- Supports 1, 4, 8, 16 camera viewing formats (maximum of 16 cameras in the list).
- Gets JPEG format images to print and save to “Print or Save JPEG format images”.
- Record video in AVI format—compatible with popular media players. (needed the Divx codec)



## SYSTEM REQUIREMENTS

The following lists the minimum suggested hardware and operating system requirements needed to run the Web Viewer.

<b>OS</b>	Windows XP Professional Windows 2000 Windows Vista Home Basic / Premium
<b>Web Browser</b>	Internet Explorer 6.0.2900.2180 or higher
<b>CPU</b>	Intel Pentium 4 with 2 GHz processor
<b>MEMORY</b>	512 MB
<b>Monitor</b>	High Color 16-bit 1024 x 768
<b>HDD</b>	50 MB(Installation space required) * Additional HDD space required for recording. Recorded file size will vary depending on recording quality settings.


## CONNECTING WEB VIEWER

1. Open your web browser and type the IP address or URL of DVR into the URL address box.



The basic URL of the DVR is as following in case of MAC address :


- If the MAC address is 00-0c-8c-ab-cd-ef, domain will be shown as "habcdef.websamsung.net". The "abcdef" of the domain indicates last 6 digits of the MAC address and the "h" is a code for identifying the DVR(SHR-5042/5040).

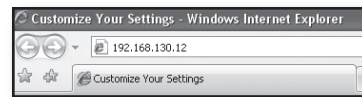


2. For Administrator, type "**ADMIN**", and then type the password that DVR is set up to. Non admin users have to add the User ID and the Password at "System → User Manager" menu.



- It allows simultaneous access to DVR by up to 4 users, including Admin privilege user and user privilege users.
- The factory default password for Administrator privileges is "4321."
- You can change the password and permissions for Administrator and User privileges in "System → User Manager" menu.

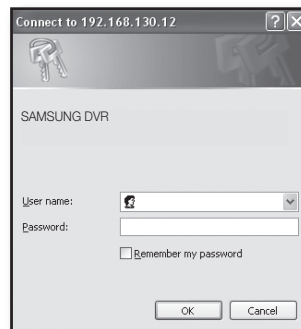

3. Click “Install ActiveX Control...”

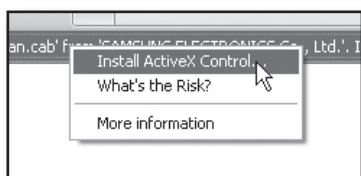

4. Click “Install”.



5. Click “Install”.




6. You may have “Windows Security Alert” that attempts to block this with the Windows Firewall. In that case, click “Unblock” to start Web Viewer.



7. Installation is complete. Now you can see the main screen of Live Viewer.



## USING Live Viewer

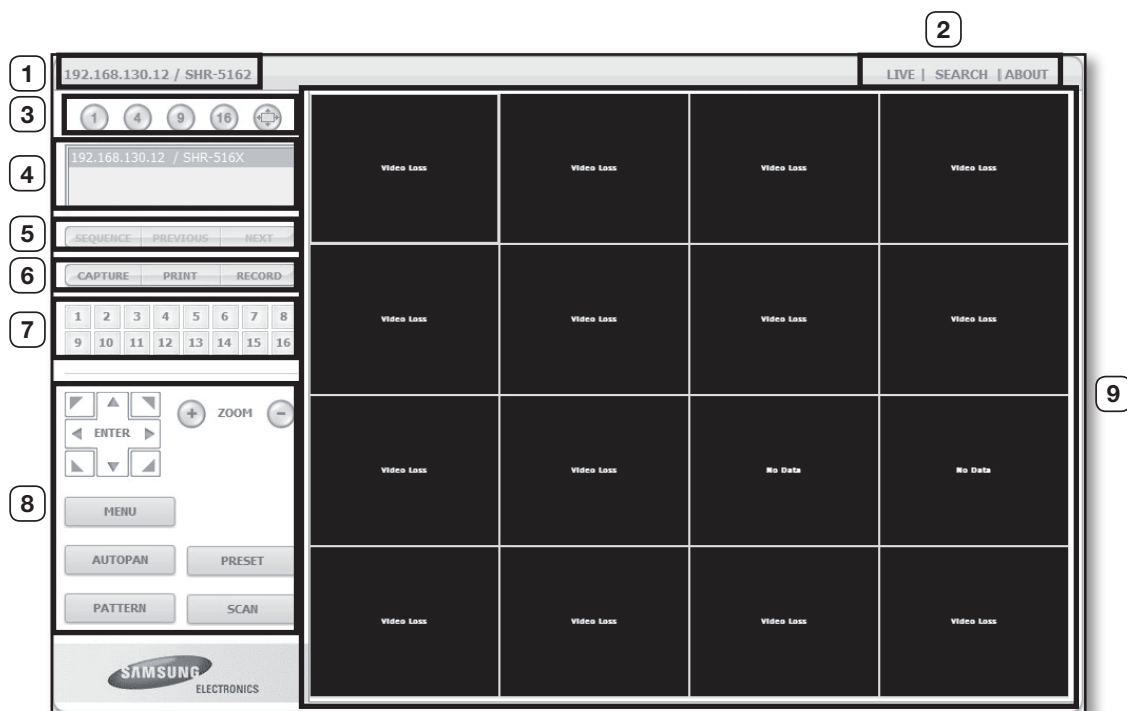


The Live Viewer screen consists of following :

- ① This displays the IP address and the model name of the connected DVR.
- ② These menus consist of **LIVE**, **SEARCH**, **SETUP**, **ABOUT**.
- ③ These buttons are used for the screen split and full screen mode.
- ④ This displays the IP address and the status of the connecting DVR.
- ⑤ These buttons are used for sequence and changing the screen channel.
- ⑥ These buttons are used for capture, print, and save the image.
- ⑦ These buttons display the current channel.
- ⑧ These buttons are used for PTZ related functions.
- ⑨ This displays the screen for connected camera with DVR.


- ✎ • The resolution is at 1024 x 768 pixels.
- ✎ • The initial screen split mode is according to the channel numbers of the connected DVR. You can change the screen split mode by clicking buttons for splitting screen.
- ✎ • Non-admin users do not have access to **SEARCH** and **SETUP** menu.
- ✎ • If you use Net I and Web Viewer simultaneously in Windows Vista, Web Viewer will be shut down abnormally. Select "Run as administrator" when running Internet Explorer.

## OSD INFORMATION DISPLAY

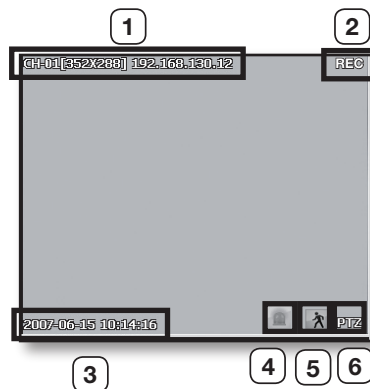



- ① The channel number, video size, and IP address of the connected DVR are displayed.
- ② If the video data of the current channel is being recorded on your PC, "**REC**" appears on the screen.
- ③ The current date and time of the DVR are displayed.
- ④ Alarm icon appears when alarm is issued. It disappears when pressed the **ALARM** button of the DVR.
- ⑤ Motion icon appears when motion is detected. It disappears when pressed the **ALARM** button of the DVR.

- ⑥ It displays whether the PTZ controls are active.

-  If you have set PTZ cameras for the DVR, "PTZ" is displayed on the screen. Select a PTZ camera channel and use the **PTZ** button for camera control.

## SPLIT-SCREEN

You can change the split mode by clicking each number icon.

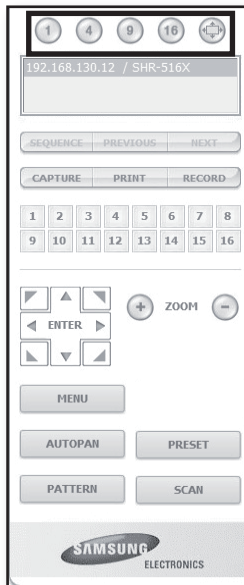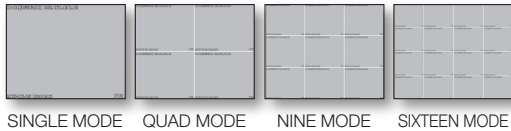

- Click  button.

The screen displays the selected camera connected to the DVR in "**SINGLE MODE**".

- Click  button.

The screen displays the selected camera connected to the DVR in "**QUAD MODE**".

- Click  button.

The screen displays the selected camera connected to the DVR in "**NINE MODE**".

- Click  button.

The screen displays the selected camera connected to the DVR in "**SIXTEEN MODE**".


## FULL SCREEN MODE

- Click  button.

The screen displays the selected camera connected to the DVR in "**FULL SCREEN MODE**". To back to the previous mode, press the ESC key.

## CONNECTED DVR

This displays the IP address and the status of the connecting DVR.

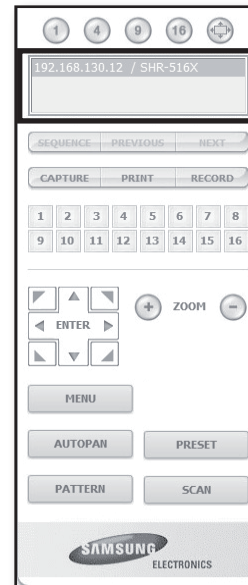

- Connection failure message

**No Response** : Appears when the DVR does not respond.

**Wrong ID** : Appears when the input ID is wrong.

**Wrong Password** : Appears when the input password is wrong.

**Wrong Port Number** : Appears when the port number is wrong.

**Collision** : Appears when Admin mode is already in use or simultaneous access to the same DVR from the PC.

**User Full** : Appears when the maximum number of users is exceeded.

- The numbers of simultaneous connection are 3 which includes the users for SmartViewer.

## CHANGING THE LIVE SCREEN MODE



- **SEQUENCE:** When this button is clicked, screens are switched at a preset interval.  
In **SINGLE MODE**, the channel numbers are sequentially switched from 1 to 16.  
In **QUAD MODE**, the screens are changed like 1st 4 channels (1~4) → 2nd 4 channels(5~8) → 3rd 4 channels(9~12) → 4th 4 channels (13~16).  
In **NINE MODE**, the screens are changed from 9 channels (1~9) to 7 channels (10~16).  
In **SIXTEEN MODE**, the screen refreshes at the preset interval




Preset interval (10 seconds)

- **PREVIOUS:** When this button is clicked, previous screen follows.  
In **SINGLE MODE**, the channel numbers are switched in reverse order.  
In **QUAD MODE**, the screens are changed like 1st 4 channels (1~4) → 2nd 4 channels (13~16) → 3rd 4 channels (9~12) → 4th 4 channels (5~8).  
In **NINE MODE**, the screens are changed from 9 channels (1~9) to 7 channels (10~16).  
In **SIXTEEN MODE**, the screen is refreshed.
- **NEXT:** When this button is clicked, next screen follows.  
In **SINGLE MODE**, the channel numbers are sequentially switched from 1 to 16.  
In **QUAD MODE**, the screens are changed like 1st 4 channels (1~4) → 2nd 4 channels (5~8) → 3rd 4 channels (9~12) → 4th 4 channels (13~16).  
In **NINE MODE**, the screens are changed from 9 channels (1~9) to 7 channels (10~16).  
In **SIXTEEN MODE**, the screen is refreshed.




- If 16-channel DVR is connected, clicking "NEXT" in **QUAD MODE** is to change the screen as shown in the picture.

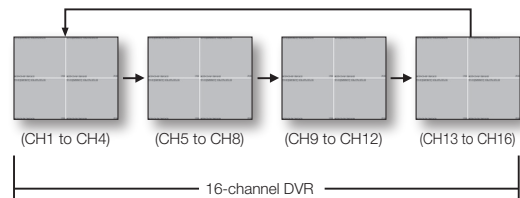


## SAVING THE LIVE SCREEN ON THE PC

- **CAPTURE:** Captures the current picture on the screen and saves it as a jpg or bmp image file.

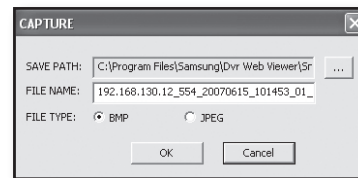


- The default saving path is "C:\Program Files\Samsung\Dvr Web Viewer\SnapShot\Live". To change the saving path, click "SAVE PATH" button( ...) and then select the path you want. For Windows Vista, the saving path is "C:\users\user ID\AppData\LocalLow\Samsung\DVR Web Viewer\Snapshot\" and it cannot be modified.
- The file is automatically named as following:  
"IP address\_Port number\_YYMMDD\_camera number\_index" Ex) 192.168.130.12\_554\_20070615\_101530\_01\_00

- **PRINT:** Prints the live screen that is now being displayed. It also prints IP address, time, camera number, and current event state.

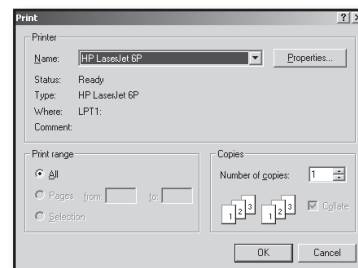

- **RECORD:** Saves the current image on the screen and saves it as a avi video file.

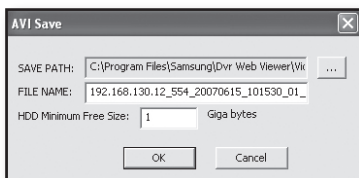

- To record it, it is required at least 1GB of available space.
- The default saving path is "C:\Program Files\Samsung\Dvr Web Viewer\VideoClip\Live". To change the saving path, click "SAVE PATH" button( ...) and then select the path you want. For Windows Vista, the saving path is "C:\users\user ID\AppData\LocalLow\Samsung\DVR Web Viewer\VideoClip\" and it cannot be modified.
- The file is automatically named as following: "IP address\_Port number\_YYMMDD\_camera number\_index" Ex) 192.168.130.12\_554\_20070615\_101530\_01\_00
- For **AVI Save**, you need the DivX codec for playing saved files. You can download the free version of the Divx codec at <http://sourceforge.net/projects/ffdshow/>.


## CHANGING THE LIVE SCREEN CHANNEL

Each number indicates the screen positions in Web Viewer.


- Blue numbers : Indicates that the current channel is connected to a camera.
- Gray numbers : Indicates that the current channel is not connected to any camera.



## USING PTZ CAMERA

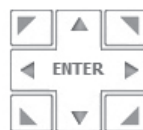

Click the direction buttons to control the camera.

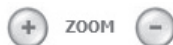


Click the + or - buttons to zoom in or out the image displayed.

**MENU:** Appears the camera menu screen.



**PRESET:** Moves the lens direction to a preset direction.

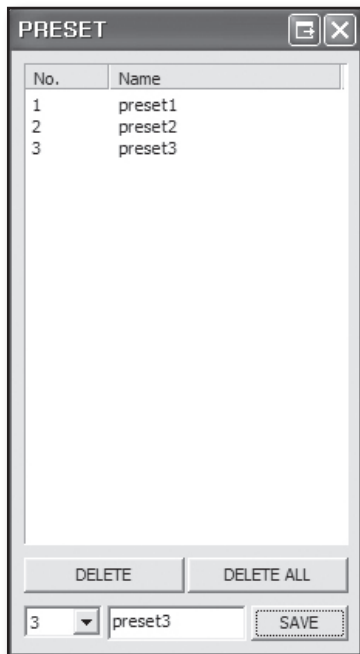

1. If you click **PRESET**, the camera moves to the preset position.
2. You can delete the selected preset or all presets.
3. You can save the new preset number and name.



You can save the preset up to 20.

**AUTOPAN:** Moves the camera lens direction between 2 points set for the camera.


**SCAN:** Moves the camera lens direction between 2 preset points of the camera.

**PATTERN:** You can set camera various movement patterns such as zoom, move, etc. so that a camera automatically moves according to the pattern.



- When a DVR is using the PTZ camera controls, Web Viewer cannot control the PTZ camera.
- The PTZ camera controls can be used by the admin user.
- The Camera Menu Setup function is available only supported cameras.
- All function of PTZ is same as one of DVR.
- Power pan/tilt function operates only with supported cameras. (Example: Samsung SCC-6475)
- Drag down to zoom in or drag up to zoom out by power pan/tilt function.

## USING Search Viewer

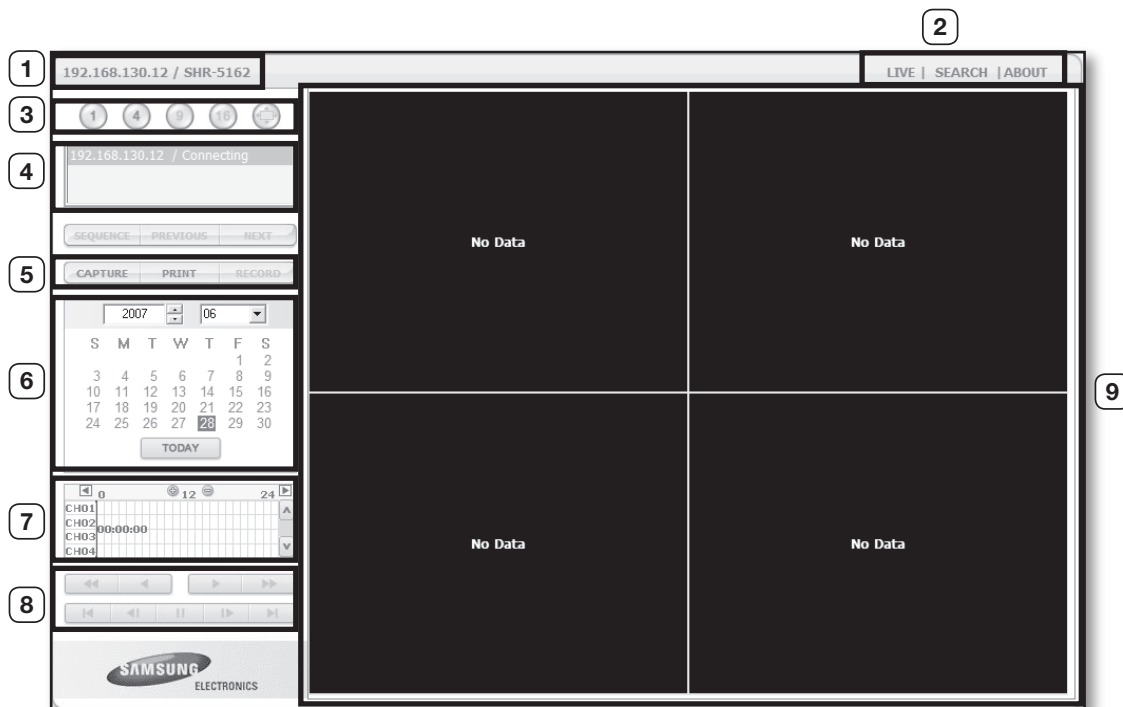

The Search Viewer screen consists of following:

- ① This displays the IP address and the model name of the connected DVR.
- ② These menus consist of **LIVE**, **SEARCH**, **SETUP**, **ABOUT**.
- ③ These buttons are used for the screen split and full screen mode.
- ④ This displays the IP address and the status of the connected DVR.
- ⑤ These buttons are used for capture, print, and save the image.
- ⑥ This displays a calendar at which you can search the recorded video.
- ⑦ This displays a timeline at which you can search the recorded video by the time.
- ⑧ These buttons are used for controlling playback.
- ⑨ This displays the screen for playback of recorded video.



- **SEQUENCE**, **PREVIOUS**, **NEXT** buttons are not available in **SEARCH** menu.
- Non-admin users do not have access to **SEARCH** and **SETUP** menu.

### SPLIT-SCREEN

You can change the split mode by clicking each number icon.



SINGLE MODE    QUAD MODE





- Click **1** button.

The screen displays the selected camera connected to the DVR in "**SINGLE MODE**".

- Click **4** button.

The screen displays the selected camera connected to the DVR in "**QUAD MODE**".



- Only **SINGLE** and **QUAD MODE** are available in **SEARCH** menu.
- When 16-channel DVR is connected, you can select the channels ranging from 1 to 16.

## CONNECTED DVR

This displays the IP address and the status of the connecting DVR.



- Connection failure message

**No Response** : Appears when the DVR does not respond.

**Wrong ID** : Appears when the input ID is wrong.

**Wrong Password** : Appears when the input password is wrong.

**Wrong Port Number** : Appears when the port number is wrong.


**Collision** : Appears when Admin mode is already in use or simultaneous access to the same DVR from the PC.


**User Full** : Appears when the maximum number of users is exceeded.

- The numbers of simultaneous connection are 3 which includes the users for SmartViewer.


## SAVING THE LIVE SCREEN ON THE PC

- **CAPTURE**: Captures the current picture on the screen and saves it as a jpg or bmp image file.

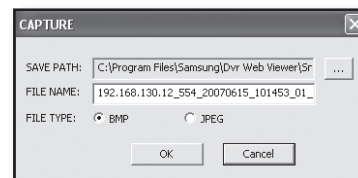


- The default saving path is "C:\Program Files\Samsung\Dvr Web Viewer\SnapShot\Search". To change the saving path, click "SAVE PATH" button(  ) and then select the path you want. For Windows Vista, the saving path is "C:\users\user ID\AppData\LocalLow\Samsung\DVR Web Viewer\SnapShot\" and it cannot be modified.
- The file is automatically named as following: "IP address\_Port number\_YYMMDD\_camera number\_index" Ex) 192.168.130.12\_554\_20070615\_101453\_01\_00

- **PRINT:** Prints the playback screen that is now being displayed. It also prints IP address, time, camera number, and current event state.


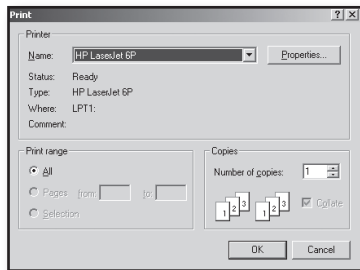


- **RECORD:** If you select a channel and click this button during playback (only play), the video data is saved in a DVR file. (It is saved in the designated folder on your PC.) To stop recording, click this button again.

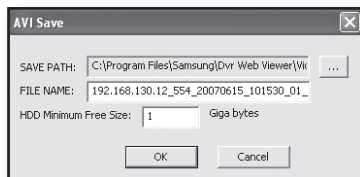

- To record it, it is required at least 1GB of available space.
- The default saving path is "C:\Program Files\Samsung\Dvr Web Viewer\VideoClip\Search". To change the saving path, click "SAVE PATH" button( ...) and then select the path you want. For Windows Vista, the saving path is "C:\users\user ID\AppData\LocalLow\Samsung\DVR Web Viewer\VideoClip\" and it cannot be modified.
- The file is automatically named as following: "IP address\_Port number\_YYMMDD\_camera number\_index" Ex) 192.168.130.12\_554\_20070615\_101530\_01\_00
- For AVI save, you need the DivX codec for playing saved files. You can download the free version of the Divx codec at <http://sourceforge.net/projects/ffdshow/>.


## SEARCHING THE RECORDED VIDEO IN THE CALENDAR

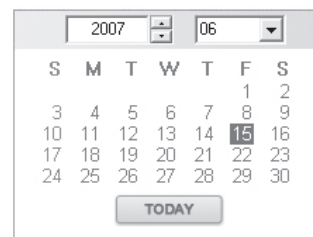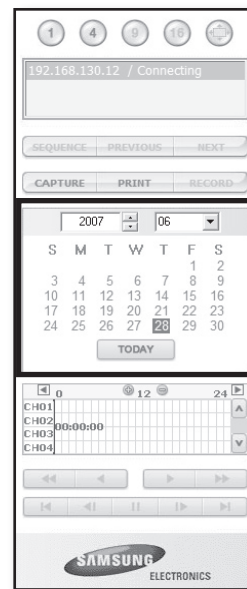

If the video data has been recorded on a date, the date is distinguished in green. If you click the date, the recorded video information is displayed in the time line.


When you click "**TODAY**", it is changed to today's date.

## SEARCHING THE RECORDED VIDEO IN THE TIMELINE

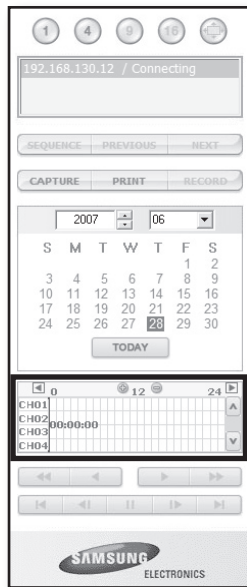


It displays the recorded video data status on the DVR after a date is selected. The normal mode displays the time ranging from 0 to 24 Hours while the extension mode displays the time every 2 hours.

### [Normal Mode]



- If you click  button, it changes to the extension mode.
- Each time line represents 1 hour.

### [Extension Mode]



- If you click  button, it changes to the normal mode.
- Each time line represents 5 minutes.



- The channels are ranging from CH01 to CH16.

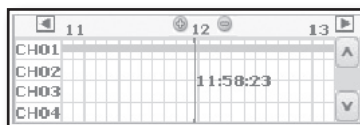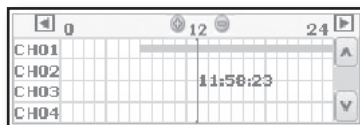

## CONTROLLING PLAYBACK

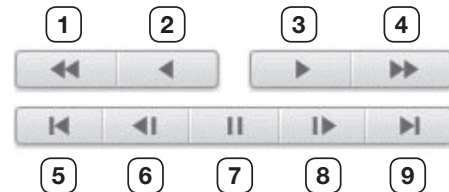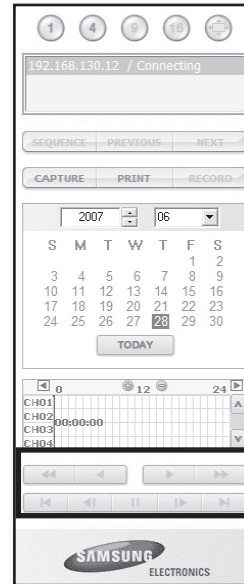


- ① Fast Backward: Reverse-plays faster(2x).
- ② Reverse Play: Performs Reverse Play.
- ③ Play: Performs playback.
- ④ Fast Forward: Plays faster(2x).
- ⑤ Go to First: Moves the beginning time of recorded video in the time line.
- ⑥ Step Backward: Performs one step reverse-play by one frame.
- ⑦ Stop: Stops playing.
- ⑧ Step Forward: Performs one step forward by one frame.
- ⑨ Go to Last: Moves the last time of recorded video in the time line.





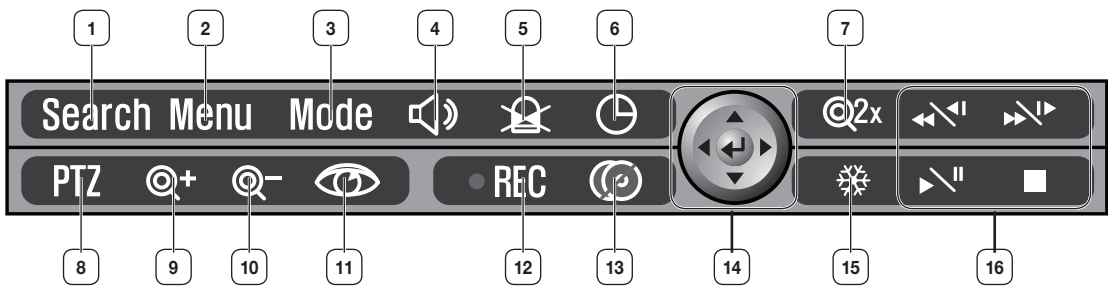

# POP-UP MENU

## Pop-up Menu

You can use this menu by pressing mouse-right button.  
Items shown on the pop-up menu are identical with buttons at system's front panel. The benefit of this menu is that user can operate DVR system by simply using mouse.








No.	Names		Features	
1	Search	Search button	It starts search mode.	
2	Menu	Menu button	It switches system to setup mode. Users can use this menu to move from lower level menu to upper level menu or when they exit from system setup mode.	
3	Mode	Split Screen Select button	Live Mode	It displays four small screens, PIP screen, and Screen Switch screens.
		Search Mode Select button	Search Mode	It displays four or nine small screens.
4		Audio Setup button	It sets Audio On/Off.	
5		Alarm button	It releases Alarm when Alarm occurs.	
6		Search/Return button	It switches to initial search screen during playing video images.	
7		Zoom button	It magnifies digital image up to 200%.	
8	PTZ	PTZ button	Perform the TELE, WIDE, PRESET or VIEW function when selecting the PTZ button.	
9		ZOOM TLLE	It provides Zoom-In feature at PTZ mode.	
10		ZOOM WIDE	It provides Zoom-Out feature at PTZ mode.	
11		PTZ Setup menu	It displays PTZ Setup screen at PTZ mode.	
12	REC	REC button	It records video images from all the camera channels regardless of recording schedule.	
13		Backup Cancel button	It cancels backup process.	

No.	Names		Features
14		Direction button	This button controls PTZ directions at PTZ mode. If user press Enter button, the pop-up menu will disappear.
15		FREEZE button	It executes Freeze feature at Live screen.
16		Fast/Step Reverse	<b>Fast Reverse:</b> It performs a search in reverse direction quickly while playing the video. <b>Step Reverse:</b> It performs frame-by-frame search in reverse direction while video is paused.
		Fast/Step Forward	<b>Fast Forward:</b> It performs a search in forward direction quickly while playing the video. <b>Step Forward:</b> It performs frame-by-frame search in forward direction while video is paused.
		Play/Pause	It toggles between Play and Pause operation while playing a video.
		Stop	It terminates Search operation while playing the video.

## SPECIFICATIONS

Category		SHR-5040	SHR-5042
OS		Embedded Linux (Version : 2.6.0)	
Compression Method	Video	MPEG-4 ASP	
	Audio	ADPCM	
Video	Input	Composite 4 channel(1Vp-p, 750hm)	
	Output	CVBS 1 Port, VGA 1 Port, S-VIDEO, SPOT 1 Port, Loop Through Out 4 channel	
Audio		4 Channel Recording/1channel Output	
Display	Standard	NTSC(120fps)/PAL(100fps)	
	Resolution	NTSC : 704x480, 352x240/PAL : 704x576, 352x288	
	Live	Single, 4 Split, PIP, Sequence, Freeze, 2x Zoom	
	Playback	Single, 4 Split, 9 Split(Live/Playback)	
Recording	Standard	NTSC(Max 120fps)/PAL(Max 100fps)	
	Resolution	NTSC : 704x480, 704x240, 352x240 PAL : 704x576, 704x288, 352x288	
	Type	REC Mode, Event, Schedule(Countinuous, Motion, Alarm In)	
Alarm In/Alarm Out		4 Ports/2 Ports	
PTZ		RS-485	
HDD		HDD x 2	HDD x 1
CD-RW		None	Supported (Samsung TS-H292c)
USB (Version : 2. 0)		2 Ports	2 Ports
USB Mouse		Supported	
Remote S/W		Supported	
Network		Static IP, DHCP, ADSL(PPPoE)	
Backup	Media	USB	CD-RW, USB
	Type	SDB, SFX, AVI	
Dimension		215(W) x 352(D) x 88(H)	
Weight		4.0 Kg	
Power		AC 100-240V, 50/60Hz, 59W (Model : ADP-5412VE)	

## OUTLINE DRAWINGS

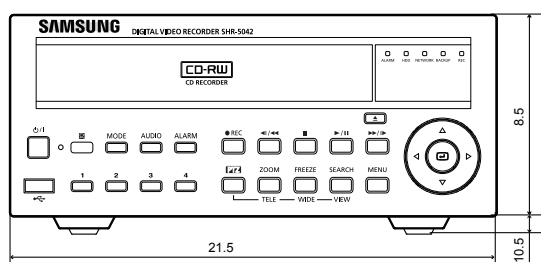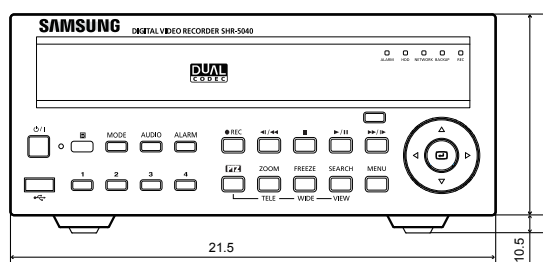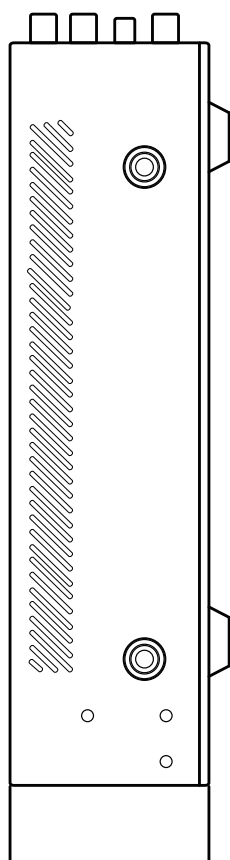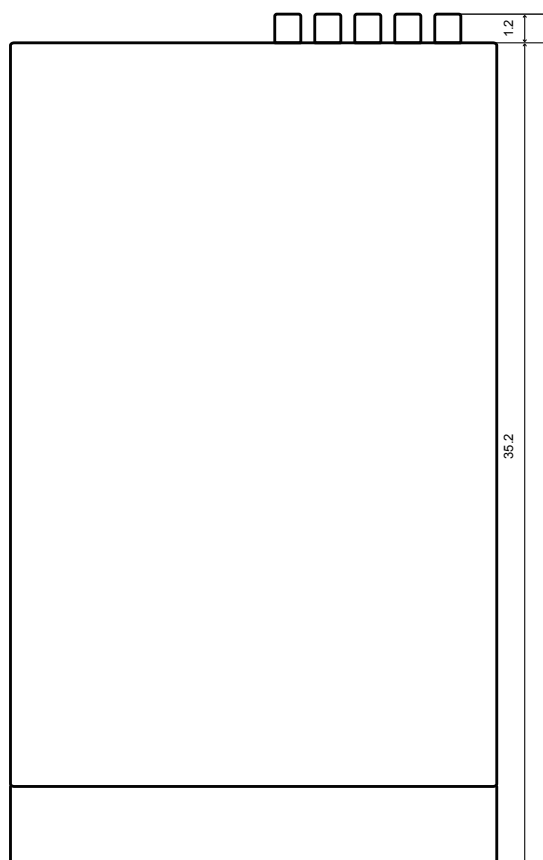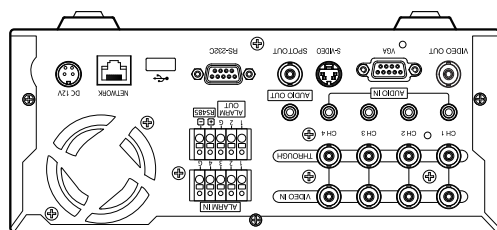

## TROUBLESHOOTINGS(FAQ)

PROBLEM	SOLUTION
<b>Can't turn ON the power of system</b>	<ul style="list-style-type: none"> <li>• Check if the computer's power cables are all connected properly.</li> <li>• Check the input voltage.</li> <li>• If you can't find any wrong connection, but you still can't turn on the power, you have to consult service center or technicians.</li> </ul>
<b>Power is turned ON, but all you can see is a blue screen.</b>	<ul style="list-style-type: none"> <li>• Check if the monitor's power cables are all connected properly.</li> <li>• Check if the monitor's power button is pressed ON.</li> <li>• Check if the output data cable of SHR-5040/5042 system is properly connected to the monitor.</li> <li>• Disconnect the power cable and connect it.</li> <li>• If you choose VGA mode for video output, you have to wait about 1 minute before you can see surveillance screen on your monitor.</li> </ul>
<b>Camera numbers are displayed on the screen, but can't see any visual transferred from camera.</b>	<ul style="list-style-type: none"> <li>• Check if the output data cable from cameras are properly connected to SHR-5040/5042 system.</li> <li>• Check if the cameras' power cables are all connected properly.</li> <li>• Check the cable connections between camera and SHR-5040/5042.</li> <li>• If video signals are sent to multiple systems, sometimes video splitter generates weak video signal, so monitor displays nothing. In this case, connect the camera directly to the center system to avoid this problem.</li> <li>• Turn OFF and ON the SHR-5040/5042 system.</li> </ul>
<b>Video images are displayed, but I can't record these.</b>	<ul style="list-style-type: none"> <li>• Check if you have set Recording Method at Record Setting. If it is set to 'NONE', you have to set it correctly.</li> <li>• Turn OFF/ON the SHR-5040/5042 system.</li> </ul>
<b>Can't find recorded images.</b>	<ul style="list-style-type: none"> <li>• Check graphs to see if video images were recorded at the time zone you want to find video images.</li> <li>• If no video images were recorded at the time zone, check the setup screen to find if recording method is properly set.</li> </ul>
<b>Can't hear audio outputs.</b>	<ul style="list-style-type: none"> <li>• Check if the cameras' Audio Save Option is set properly.</li> <li>• Check if Audio Play Option is selected already at Search Screen.</li> <li>• Check if microphone and speaker are properly connected the rear side of SHR-5040/5042 system.</li> <li>• Check if the connected microphone input is working properly.</li> <li>• Check if the connected speaker output is working properly.</li> </ul>



PROBLEM	SOLUTION
Some cameras show video images in weird color or in abnormal shape.	<ul style="list-style-type: none"> <li>Check the cameras connected to the system. Switch the camera that displays defected images with the other camera that displays images correctly, and then you can check which camera is not working properly or whether SHR-5040/5042 system is defected. You can switch cameras by simply switching camera numbers on the screen.</li> <li>Check camera types. Countries around the world use different video broadcasting standards such as PAL, NTSC, or SECAM. However each standard is incompatible with the other in terms of video image transmission method and consequently video image processing methods. In this case, video images will be displayed, but not in recognizable shape. Check the video image types sent from connected cameras and image processing method set in [System Menu] are identical.</li> </ul>
Displayed video signals has a lot of noises.	<ul style="list-style-type: none"> <li>Check the video outputs from camera. Switch the camera that displays defected images with the other camera that displays images correctly, and then you can check which camera is not working properly or whether SHR-5040/5042 system is defected. You can switch cameras by simply switching camera numbers on the screen.</li> <li>Check the cable connections between camera and SHR-5040/5042. Check if these cables are shorted, mixed or disconnected.</li> <li>Check the surroundings of cable connections between camera and SHR-5040/5042. Check if there is any high-voltage power line around the cable connections. If there is any high-voltage power line nearby the cable connections, it might degrade video image quality or causes noises.</li> <li>Check the cable connections between camera and SHR-5040/5042. Check if the cables are right for transferring video signals. If you have used power cables for video image transmission, it can cause noises at displayed video images.</li> </ul>
Sometimes system is rebooted without any cause.	<ul style="list-style-type: none"> <li>If SHR-5040/5042 is not working properly, or there is any malfunction, the embedded self diagnosis feature might cause the system to reboot.</li> </ul>
Connected sensors are not working properly.	<ul style="list-style-type: none"> <li>Check the sensor types set in Camera Setup menu are identical with the sensors actually connected to the system.</li> <li>Check if the system's sensors are enabled at [Recording Setup]-[Recording Schedule] menu.</li> <li>Check if the connected sensors are correctly connected to power source.</li> <li>Check if the connected sensors' signal lines are correctly connected.</li> </ul>
Connected control devices are not working properly.	<ul style="list-style-type: none"> <li>Check if the connected control devices are enabled at Camera Setup menu.</li> <li>Check if the connected control devices are correctly connected to power source.</li> <li>Check if the signal lines of the connected control devices are correctly connected.</li> </ul>

## OPEN SOURCE LICENSE REPORT ON THE PRODUCT

This product uses software provided under the name of GPL and LGPL. You can receive the following GPL and LGPL source codes by email request to [www.sec.co.kr](http://www.sec.co.kr).

- GPL Software  
Kernel, Busybox, Sysvinit, dvd+rw-tools, cdrtools, dosfstools
- LGPL Software  
gLibc, lnetutils

### GNU GENERAL PUBLIC LICENSE

Version 2, June 1991  
Copyright (C) 1989, 1991 Free Software Foundation, Inc.  
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

#### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Lesser General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps:

(1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations. Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

### TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

Version 2, June 1991  
Copyright (C) 1989, 1991 Free Software Foundation, Inc.  
51 Franklin S

**0.** This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents

constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

**1.** You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program. You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

**2.** You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim

rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

**3.** You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

**4.** You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt

otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

**5.** You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

**6.** Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

**7.** If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system

and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

**8.** If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

**9.** The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

**10.** If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

## NO WARRANTY

**11.** BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING,

REPAIR OR CORRECTION.

**12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.**

## END OF TERMS AND CONDITIONS

### How to Apply These Terms to Your New Programs

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.  
one line to give the program's name and an idea of what it does.

Copyright (C) yyyy name of author

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year  
name of author Gnomovision comes with  
ABSOLUTELY NO WARRANTY; for details  
type 'show w'. This is free software, and you  
are welcome to redistribute it under certain  
conditions; type 'show c' for details.

The hypothetical commands 'show w' and 'show c' should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than 'show w' and 'show c'; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program 'Gnomovision' (which makes passes at compilers) written by James Hacker.

signature of Ty Coon, 1 April 1989

Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Lesser General Public License instead of this License.

## GNU LESSER GENERAL PUBLIC LICENSE

Version 2.1, February 1999

Copyright (C) 1991, 1999 Free Software Foundation, Inc.

51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

### Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share



and change free software to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages--typically libraries--of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary

General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the "Lesser" General Public License because it does Less to protect the user's freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library". The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

## **TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION**

**0.** This License Agreement applies to any software library or other program which contains

a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called “this License”). Each licensee is addressed as “you”.

A “library” means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The “Library”, below, refers to any such software library or work which has been distributed under these terms. A “work based on the Library” means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term “modification”).

“Source code” for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

**1.** You may copy and distribute verbatim copies of the Library’s complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

**2.** You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- a) The modified work must itself be a software library.
- b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.
- c) You must cause the whole of the work to

be licensed at no charge to all third parties under the terms of this License.

- d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

**3.** You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part

of the code of the Library into a program that is not a library.

**4.** You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

**5.** A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a “work that uses the Library”. Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a “work that uses the Library” with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a “work that uses the library”. The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a “work that uses the Library” uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

**6.** As an exception to the Sections above, you may also combine or link a “work that uses the Library” with the Library to produce a work

containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer’s own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License.

Also, you must do one of these things:

- a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine readable “work that uses the Library”, as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)
- b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user’s computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.
- c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.
- d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.
- e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the “work that uses the Library” must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the



executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

**7.** You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

- a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.
- b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

**8.** You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

**9.** You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

**10.** Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

**11.** If, as a consequence of a court judgment or allegation of patent infringement or for any other

reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

**12.** If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

**13.** The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software

Foundation.

**14.** If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

## NO WARRANTY

**15.** BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

**16.** IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## END OF TERMS AND CONDITIONS

### How to Apply These Terms to Your New Libraries

If you develop a new library, and you want it to

be of the greatest possible use to the public, we recommend making it free software that everyone can redistribute and change. You can do so by permitting redistribution under these terms (or, alternatively, under the terms of the ordinary General Public License).

To apply these terms, attach the following notices to the library. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found. one line to give the library's name and an idea of what it does.

Copyright (C) year name of author

This library is free software; you can redistribute it and/or modify it under the terms of the GNU Lesser General Public License as published by the Free Software Foundation; either version 2.1 of the License, or (at your option) any later version.

This library is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU Lesser General Public License for more details.

You should have received a copy of the GNU Lesser General Public License along with this library; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301 USA Also add information on how to contact you by electronic and paper mail.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the library, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the library 'Frob' (a library for tweaking knobs) written by James Random Hacker.

signature of Ty Coon, 1 April 1990 Ty Coon,  
President of Vice.

## OpenSSL LICENSE

```
* Copyright (c) 1998-2006 The OpenSSL Project.
All rights reserved.
* Redistribution and use in source and binary
forms, with or without
* modification, are permitted provided that the
following conditions
* are met:
* 1. Redistributions of source code must retain
the above copyright
* notice, this list of conditions and the following
disclaimer.
* 2. Redistributions in binary form must
reproduce the above copyright
* notice, this list of conditions and the following
disclaimer in
* the documentation and/or other materials
provided with the
* distribution.
* 3. All advertising materials mentioning features
or use of this
* software must display the following
acknowledgment:
* "This product includes software developed
by the OpenSSL Project
* for use in the OpenSSL Toolkit. (http://www.
openssl.org/)"
* 4. The names "OpenSSL Toolkit" and
"OpenSSL Project" must not be used to
* endorse or promote products derived from
this software without
* prior written permission. For written
permission, please contact
* openssl-core@openssl.org.
* 5. Products derived from this software may not
be called "OpenSSL"
* nor may "OpenSSL" appear in their names
without prior written
* permission of the OpenSSL Project.
* 6. Redistributions of any form whatsoever must
retain the following
* acknowledgment:
* "This product includes software developed
by the OpenSSL Project
* for use in the OpenSSL Toolkit (http://www.
openssl.org/)"
* THIS SOFTWARE IS PROVIDED BY THE
OpenSSL PROJECT "AS IS" AND ANY
* EXPRESSED OR IMPLIED WARRANTIES,
INCLUDING, BUT NOT LIMITED TO, THE
* IMPLIED WARRANTIES OF
MERCHANTABILITY AND FITNESS FOR A
PARTICULAR
* PURPOSE ARE DISCLAIMED. IN NO EVENT
SHALL THE OpenSSL PROJECT OR
* ITS CONTRIBUTORS BE LIABLE FOR ANY
DIRECT, INDIRECT, INCIDENTAL,
* SPECIAL, EXEMPLARY, OR CONSEQUENTIAL
DAMAGES (INCLUDING, BUT
* NOT LIMITED TO, PROCUREMENT OF
SUBSTITUTE GOODS OR SERVICES;
* LOSS OF USE, DATA, OR PROFITS; OR
BUSINESS INTERRUPTION)
```

```
* HOWEVER CAUSED AND ON ANY THEORY
OF LIABILITY, WHETHER IN CONTRACT,
* STRICT LIABILITY, OR TORT (INCLUDING
NEGLIGENCE OR OTHERWISE)
```

```
* ARISING IN ANY WAY OUT OF THE USE OF
THIS SOFTWARE, EVEN IF ADVISED
* OF THE POSSIBILITY OF SUCH DAMAGE.
```

```
* =====
```

```
* This product includes cryptographic software
written by Eric Young
```

```
* (ey@cryptsoft.com). This product includes
software written by Tim
```

```
* Hudson (tjh@cryptsoft.com).
```

```
*/
```

```
Original SSLeay License
```

```
-----
```

```
/* Copyright (C) 1995-1998 Eric Young
(eay@cryptsoft.com)
```

```
* All rights reserved.
```

```
* This package is an SSL implementation written
* by Eric Young (eay@cryptsoft.com).
```

```
* The implementation was written so as to
conform with Netscapes SSL.
```

```
* This library is free for commercial and non-
commercial use as long as
```

```
* the following conditions are aheared to. The
following conditions
```

```
* apply to all code found in this distribution, be it
the RC4, RSA,
```

```
* lhash, DES, etc., code; not just the SSL code.
The SSL documentation
```

```
* included with this distribution is covered by the
same copyright terms
```

```
* except that the holder is Tim Hudson
(tjh@cryptsoft.com).
```

```
* Copyright remains Eric Young's, and as such
any Copyright notices in
```

```
* the code are not to be removed.
```

```
* If this package is used in a product, Eric Young
should be given attribution
```

```
* as the author of the parts of the library used.
```

```
* This can be in the form of a textual message at
program startup or
```

```
* in documentation (online or textual) provided
with the package.
```

```
* Redistribution and use in source and binary
forms, with or without
```

```
* modification, are permitted provided that the
following conditions
```

```
* are met:
```

```
* 1. Redistributions of source code must retain
the copyright
```

```
* notice, this list of conditions and the following
disclaimer.
```

```
* 2. Redistributions in binary form must
reproduce the above copyright
```

```
* notice, this list of conditions and the following
disclaimer in the
```

```
* documentation and/or other materials
provided with the distribution.
```

```
* 3. All advertising materials mentioning features
or use of this software
```

```
* must display the following acknowledgement:
```

- \* "This product includes cryptographic software written by
- \* Eric Young (eay@cryptsoft.com)"
- \* The word 'cryptographic' can be left out if the routines from the library
- \* being used are not cryptographic related :-).
- \* 4. If you include any Windows specific code (or a derivative thereof) from
- \* the apps directory (application code) you must include an acknowledgement:
- \* "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"
- \* THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND
- \* ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE
- \* IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE
- \* ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE
- \* FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL
- \* DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS
- \* OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)
- \* HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT
- \* LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY
- \* OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF